 



Life Cycle 95Ci

General Assembly

95C-0XXX-01
S/N LCI100001

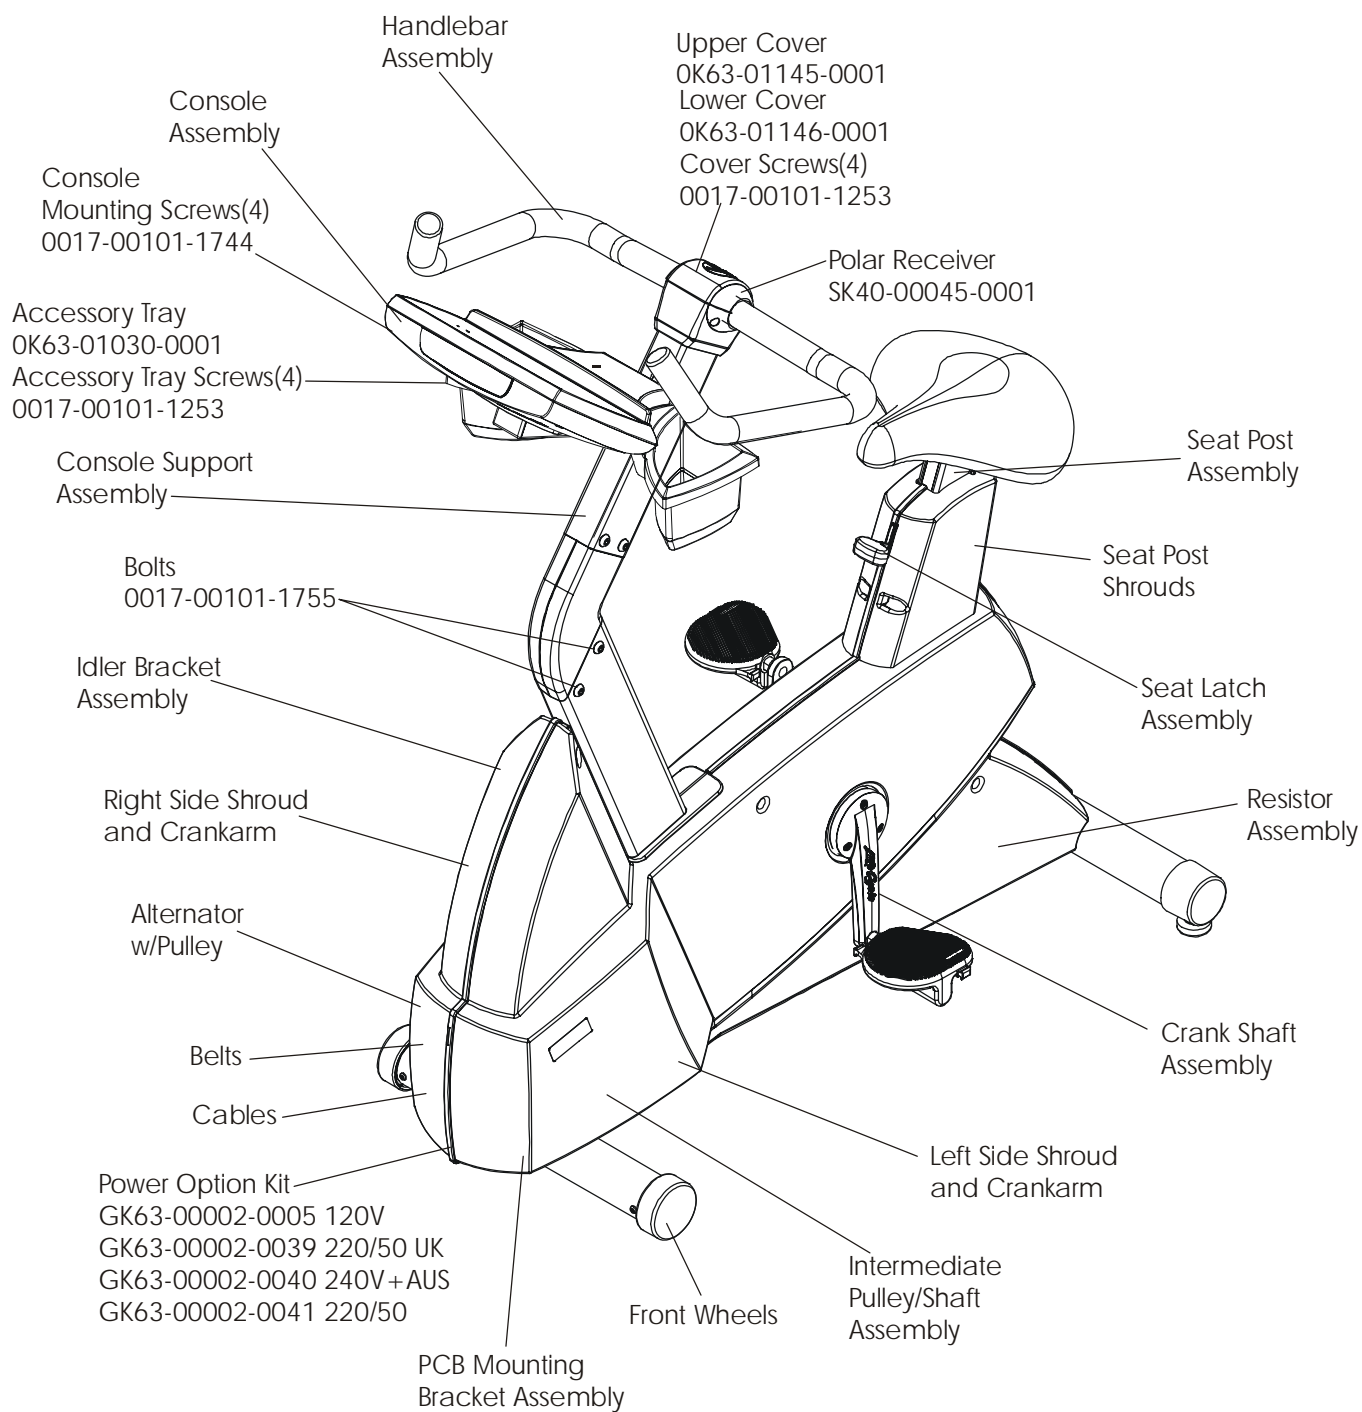


Description	Part Number
Service Manual	M051-00K63-A009
Operator Manual	M051-00K63-A064
Hardware Bag	GK63-00002-0044
KIT: Serv: Plug in Down	GK63-00002-0005
KIT: Serv: Plug in Down	GK63-00002-0039
KIT: Serv: Plug in Down	GK63-00002-0040
KIT: Serv: Plug in Down	GK63-00002-0041

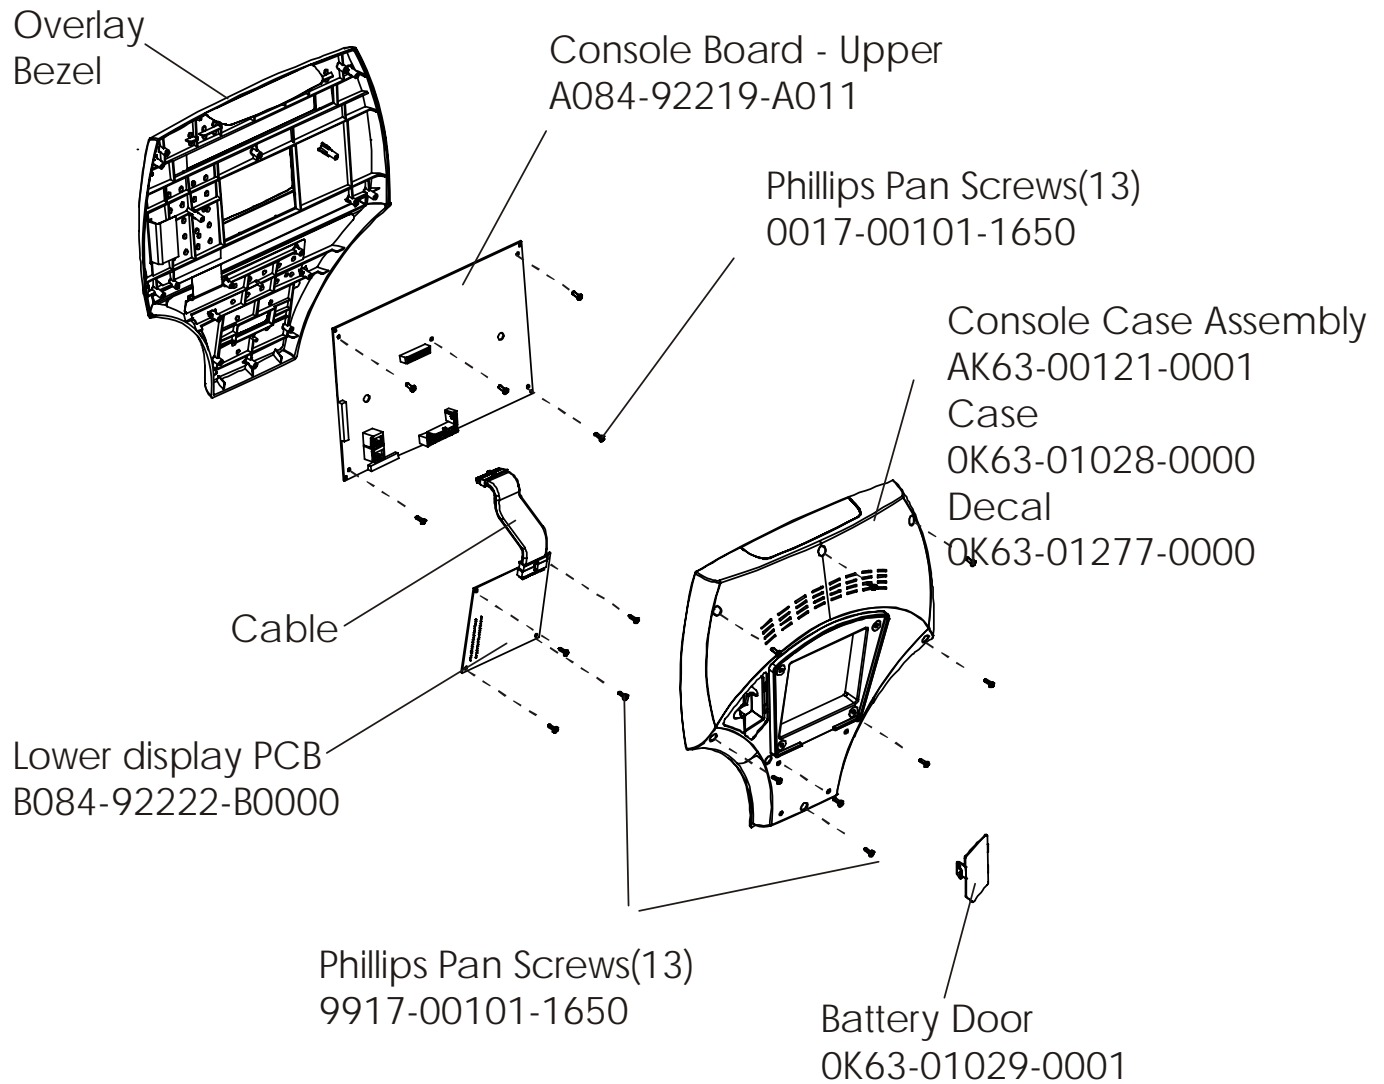 

Console Assembly	Overlay Bezel
AK63-00160-0001 Eng Met	AK63-00165-0001 Eng Met
AK63-00160-0003 Ger Met	AK63-00165-0003 Ger Met
AK63-00160-0004 Spn Met	AK63-00165-0004 Spn Met
AK63-00160-0006 Jap Met	AK63-00165-0006 Jap Met
AK63-00160-0007 Frn Met	AK63-00165-0007 Frn Met
AK63-00160-0008 Itl Met	AK63-00165-0008 Itl Met
AK63-00160-0009 Dut Met	AK63-00165-0009 Dut Met
AK63-00160-0010 Por Met	AK63-00165-0010 Por Met


Life Cycle 95Ci
Alternator and Pulley

 95C-0XXX-01
S/N LCI100001

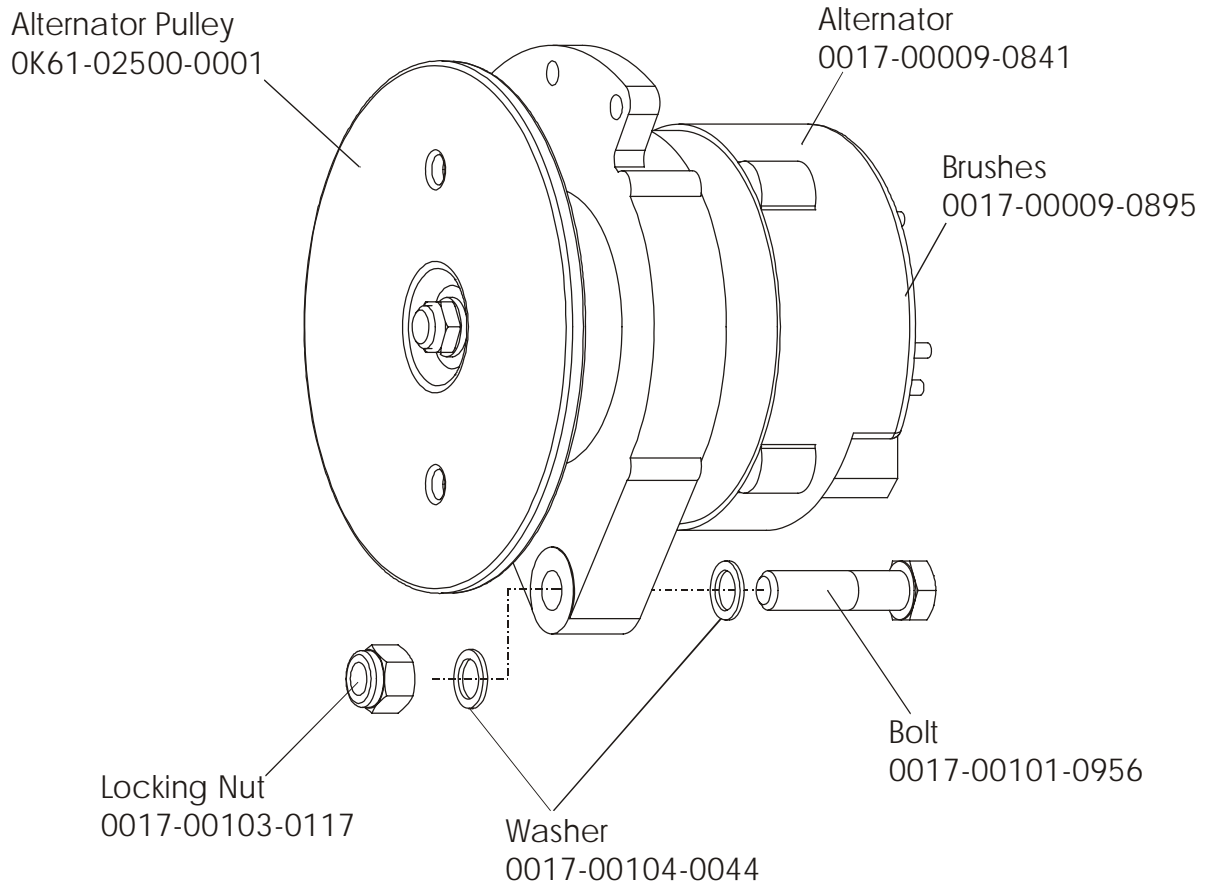

Life Cycle 95Ci
Crank Shaft and Bearings

 95C-0XXX-01
S/N LCI100001

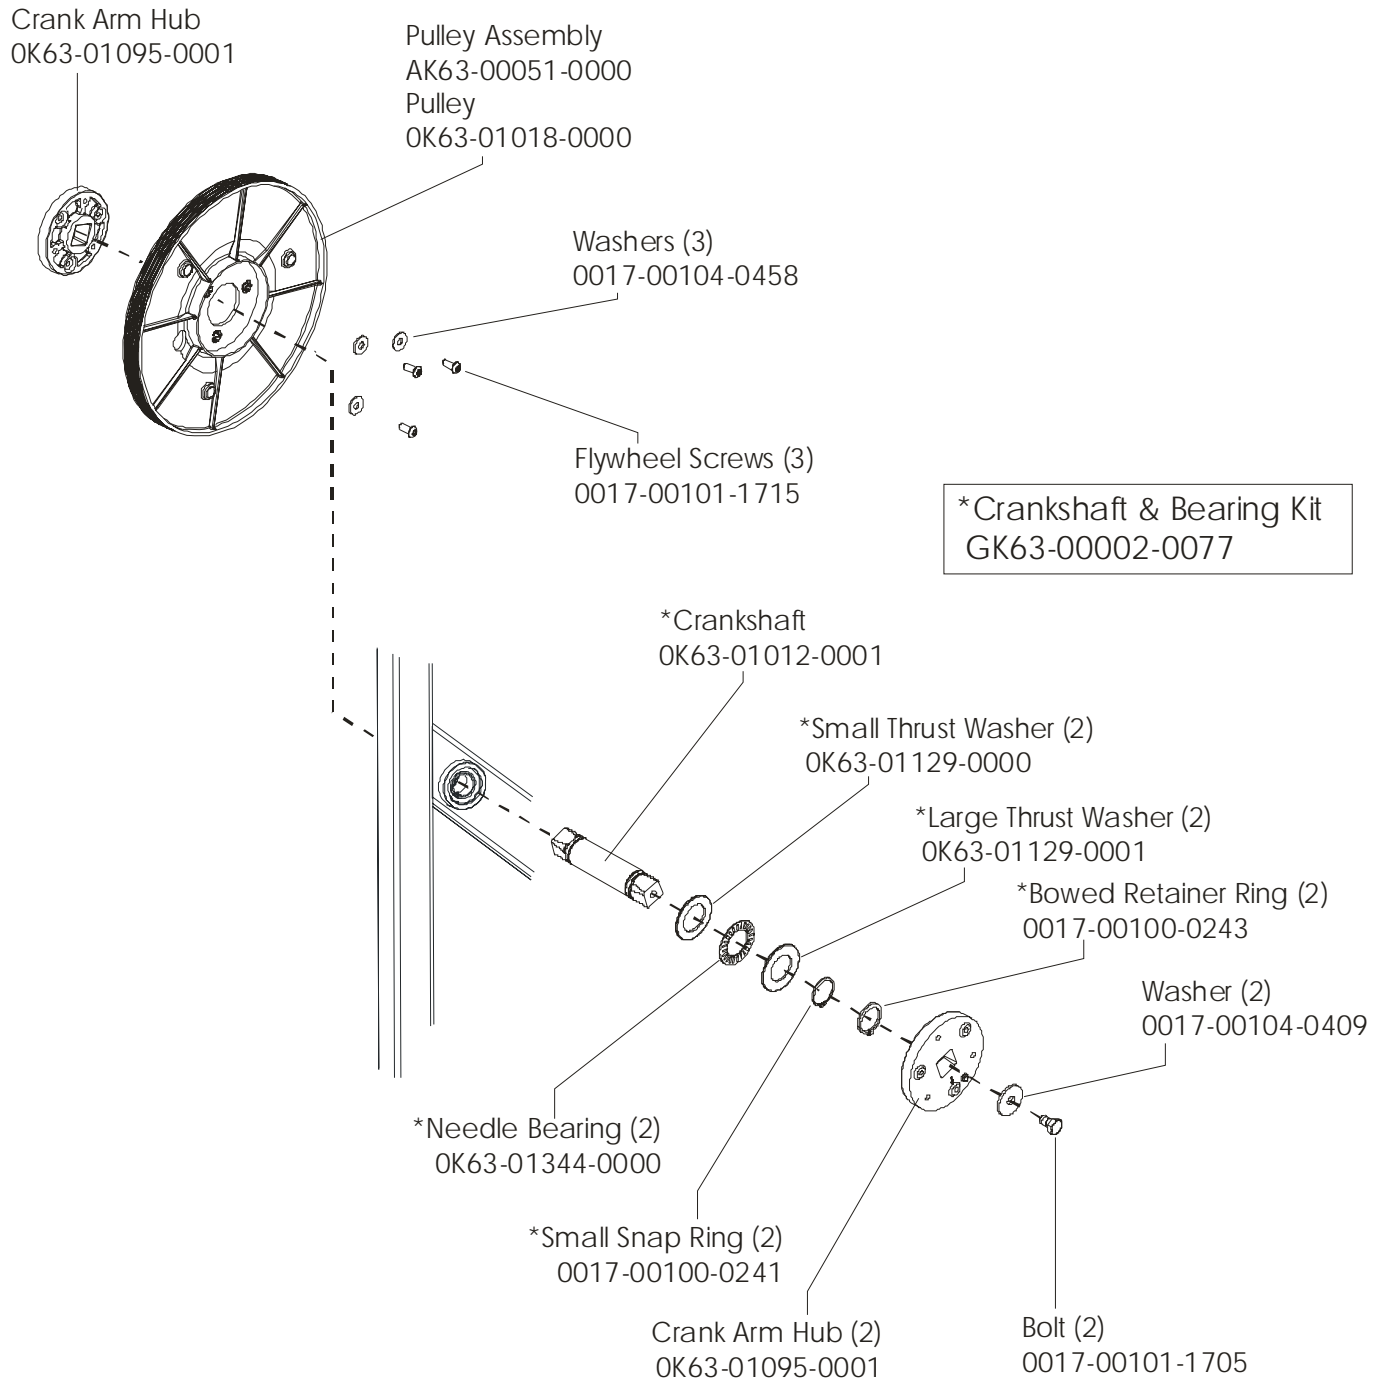


Life Cycle 95Ci
Intermediate Shaft and Bearings

95C-0XXX-01
S/N LCI100001


Clutch Assembly
AK63-00026-0000
(not included in kit)

 Magnet
118E-00001-0124
(not included in kit)

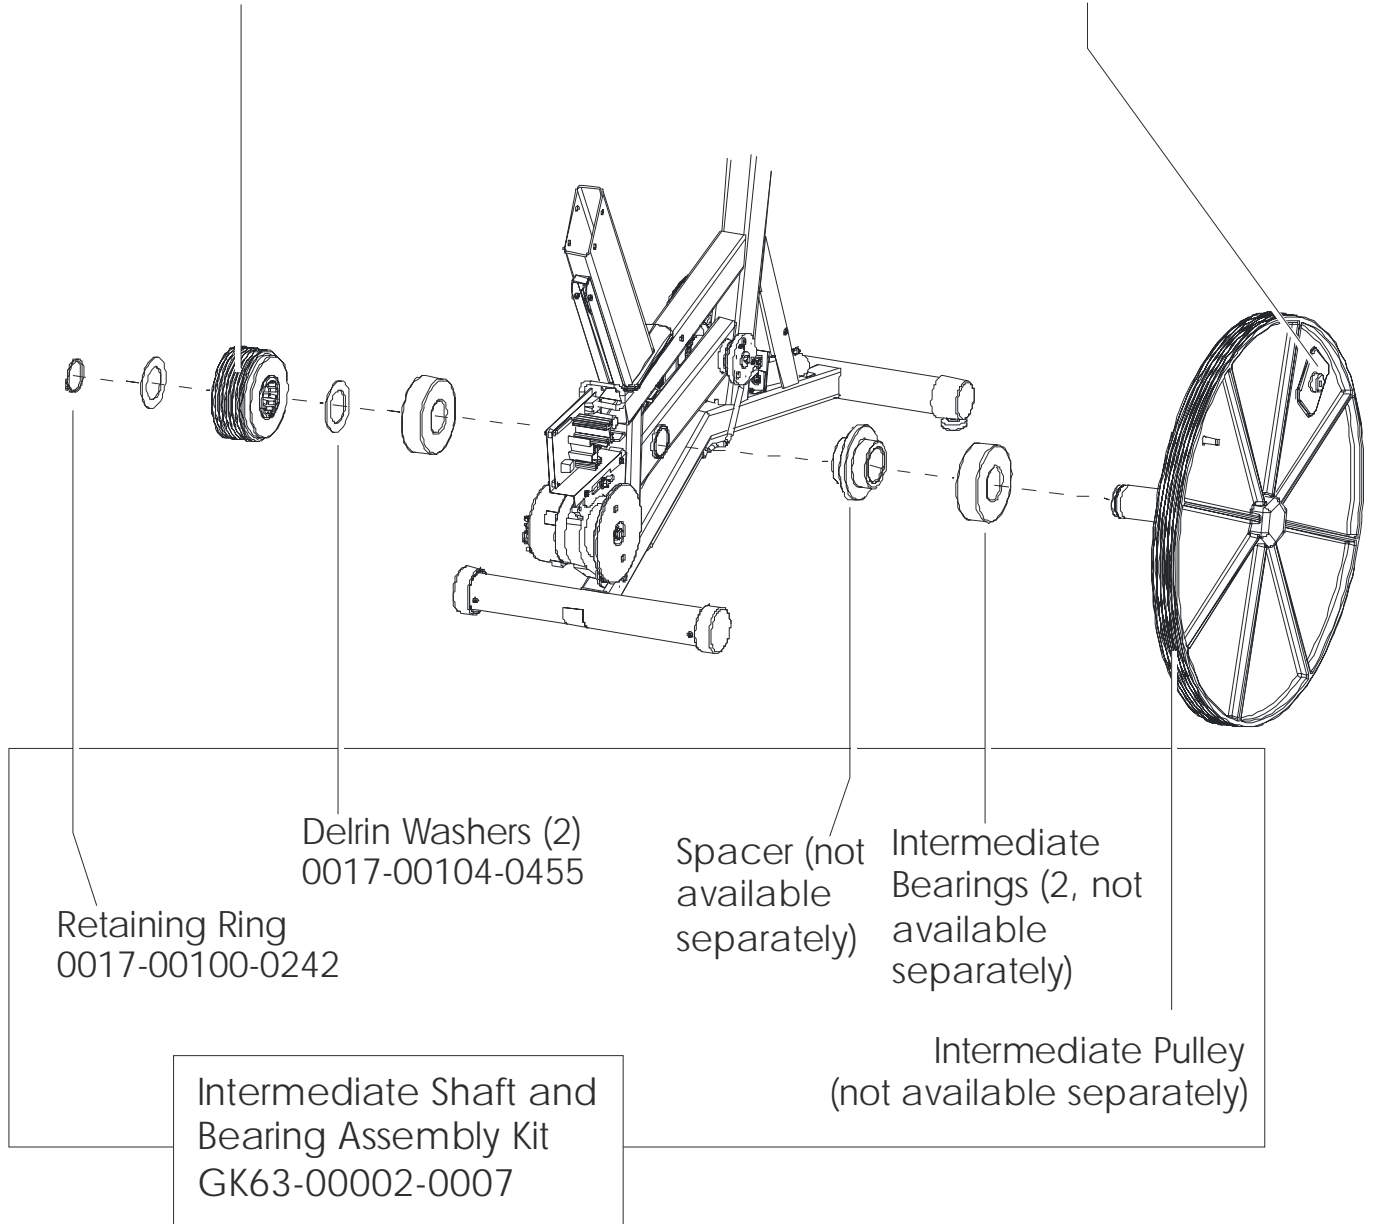

Life Cycle 95Ci
Seat Latch Assy - AK63-00043-0001

 95C-0XXX-01
S/N LCI100001

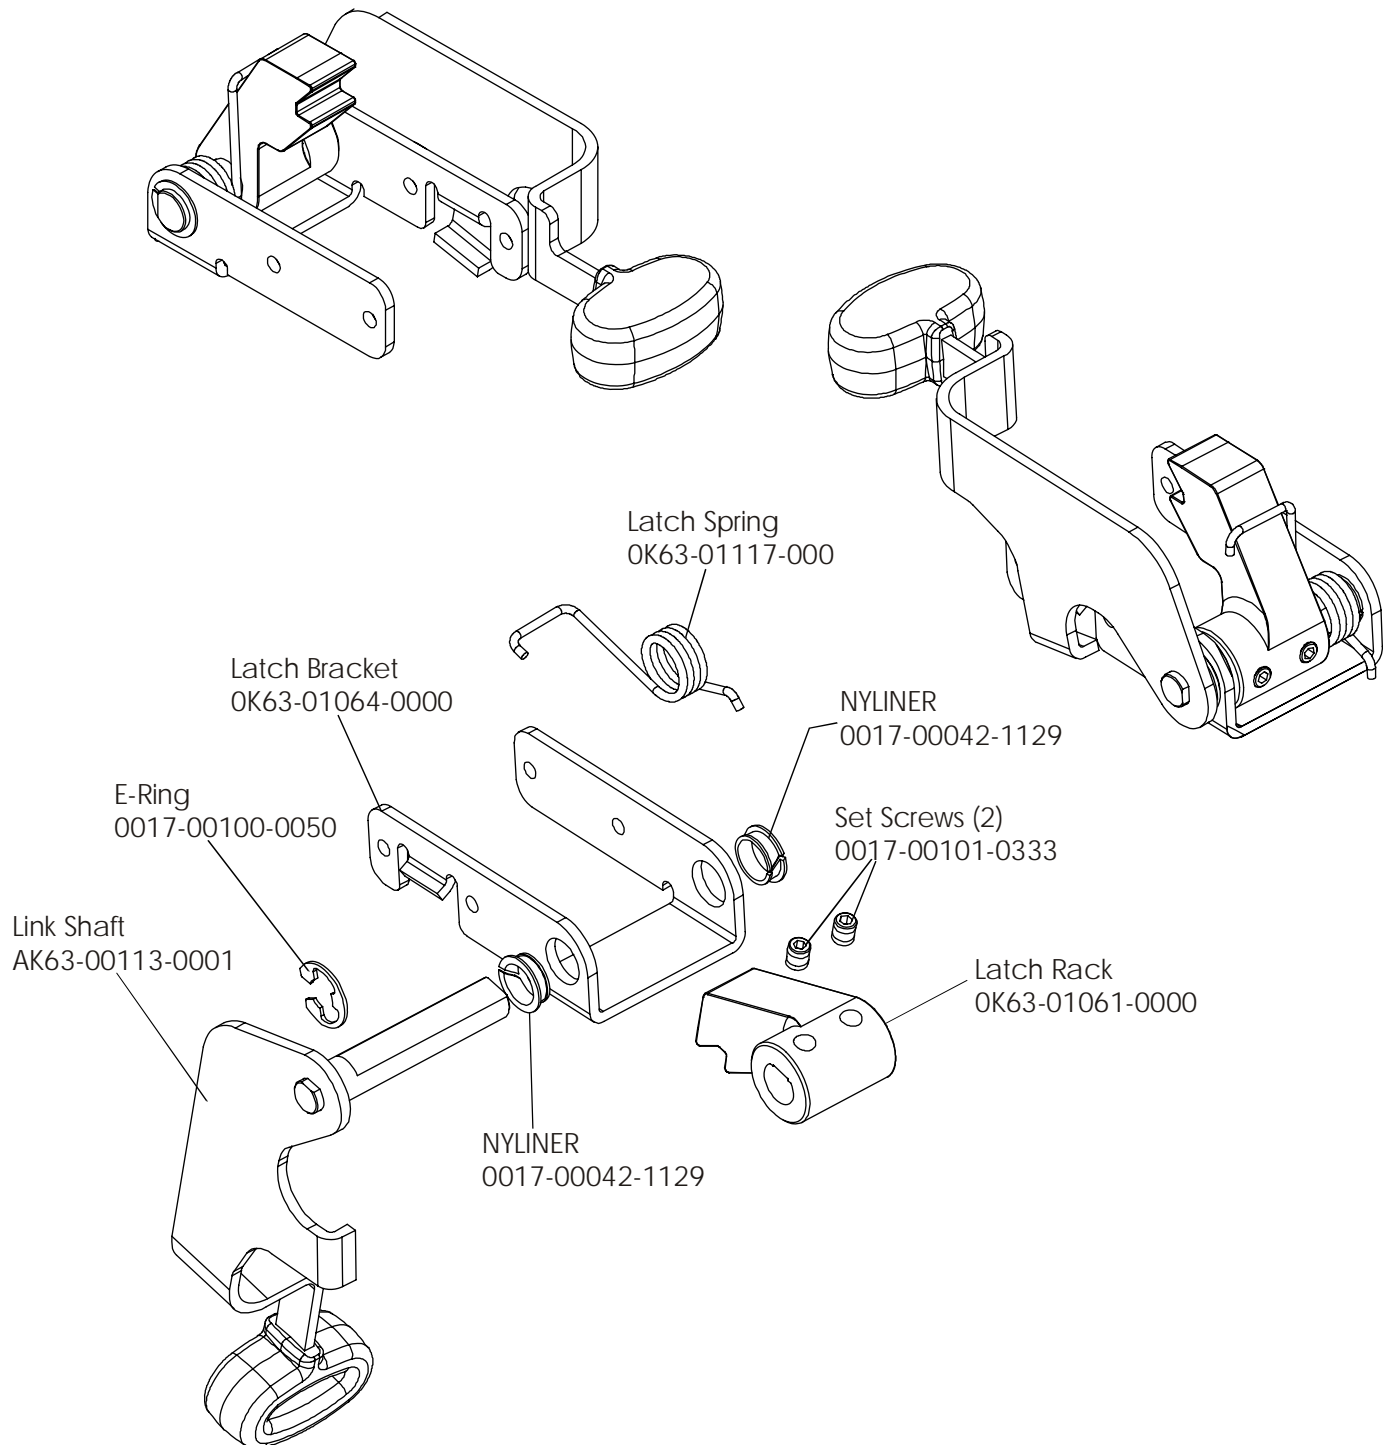


Life Cycle 95Ci

Seat Post Assy – AK63-00232-0002



95C-0XXX-01

 S/N LCI100001

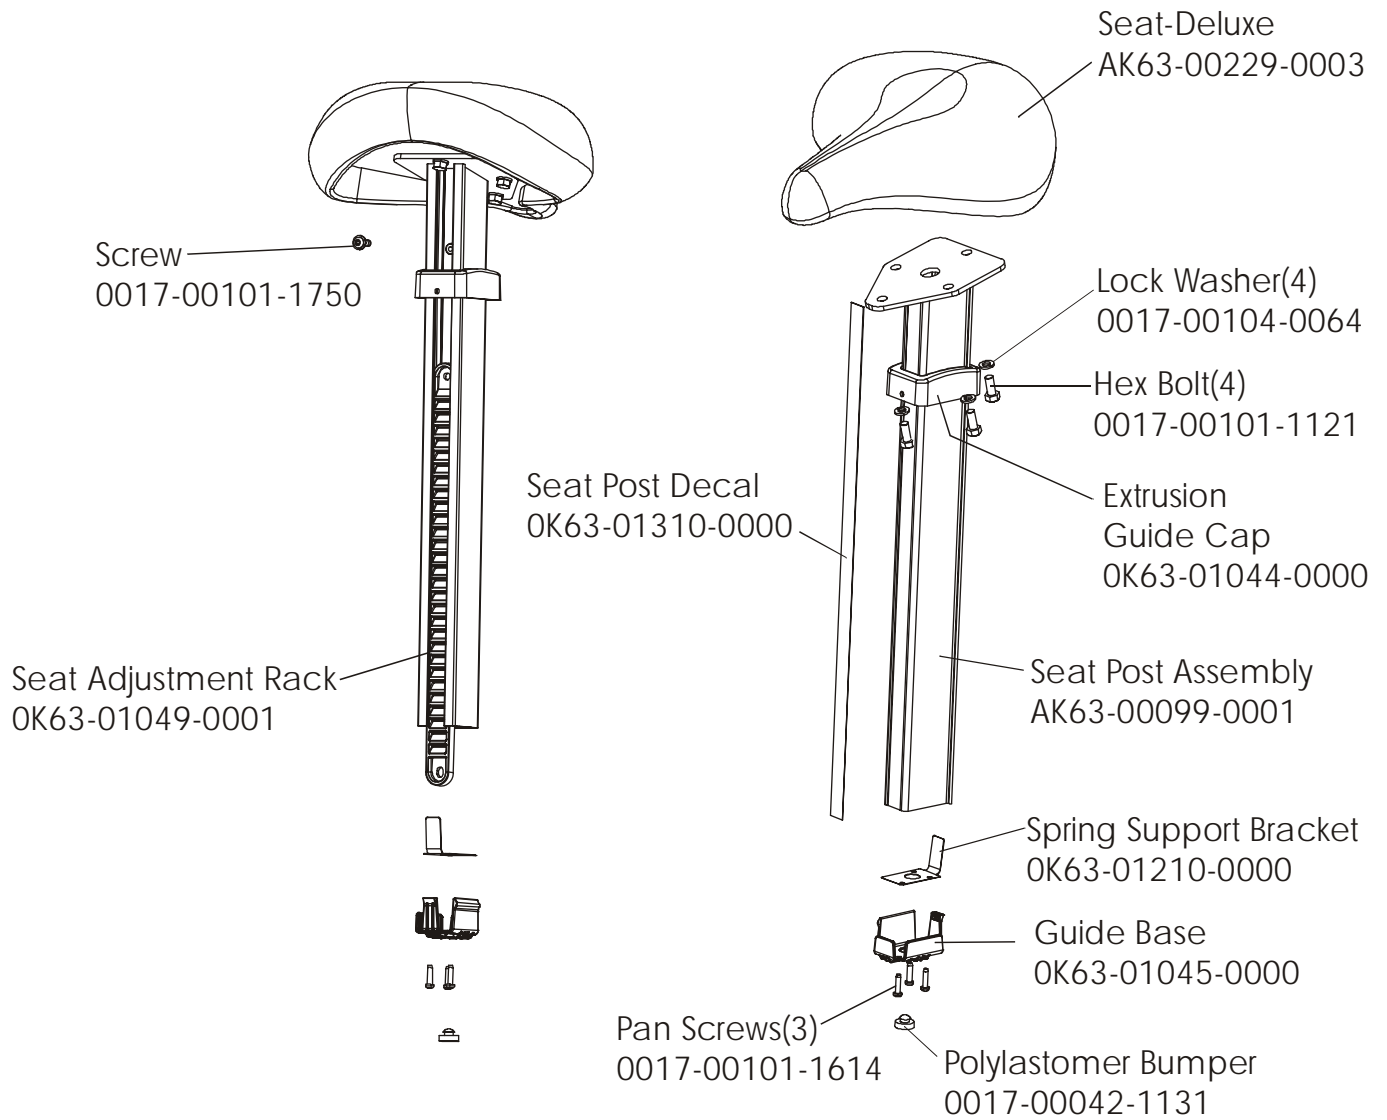


Left Seat Post Shroud
OK63-01092-0010

  Screw
0017-00101-1741

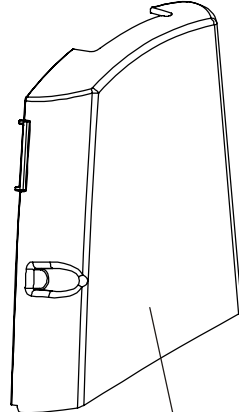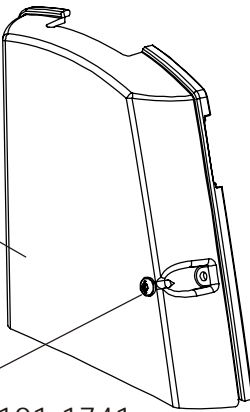

Right Seat Post Shroud
OK63-01092-0001

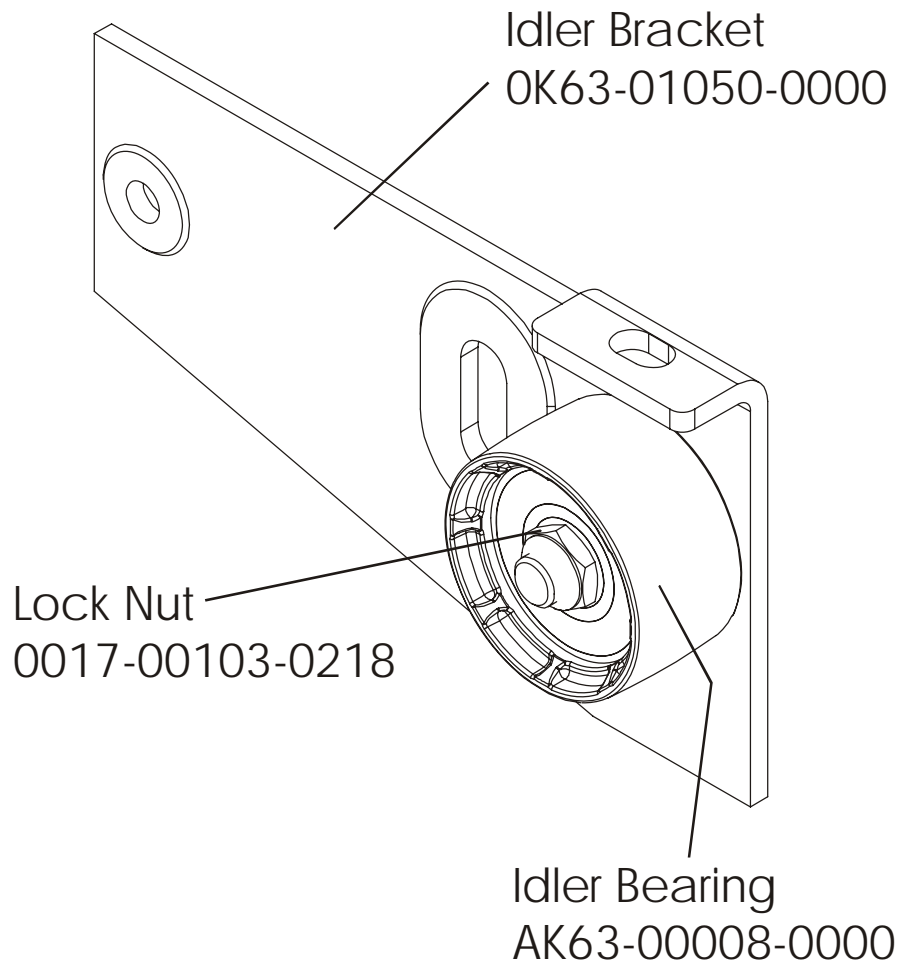 


Life Cycle 95Ci

Console Support – AK63-00065-0001

95C-0XXX-01

 S/N LCI100001

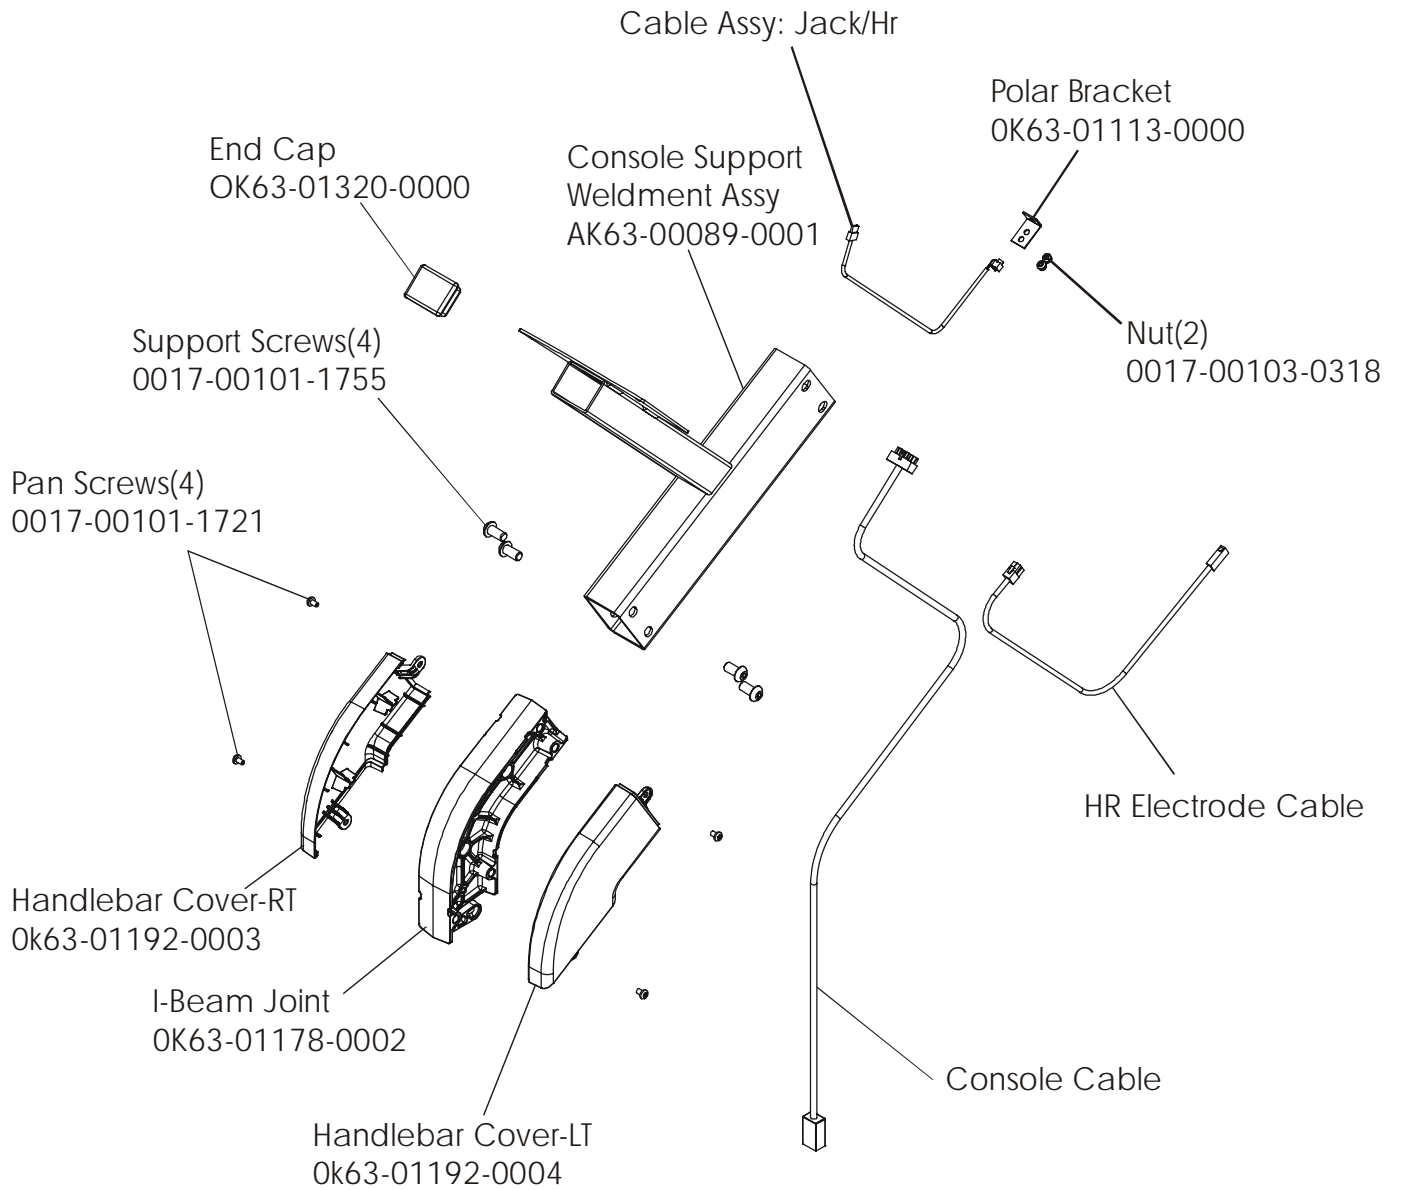


Life Cycle 95Ci

Left Side Shroud and Crank Arm

95C-0XXX-01

 S/N LCI100001

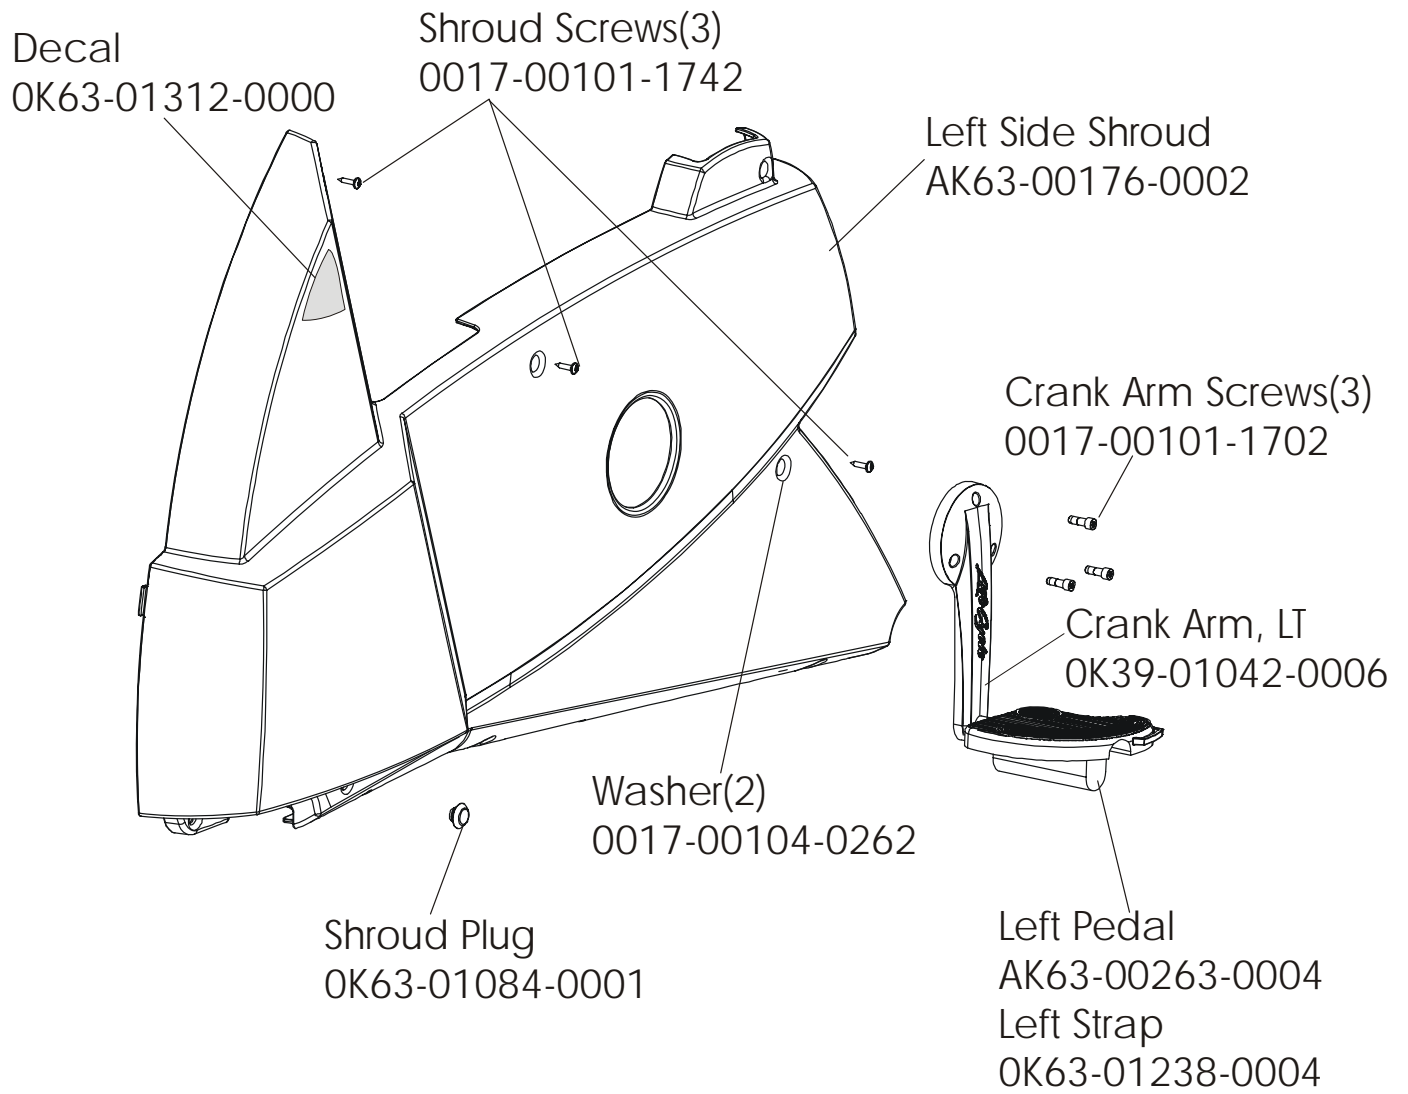


Life Cycle 95Ci

Right Side Shroud and Crank Arm


95C-0XXX-01

 
S/N LCI100001

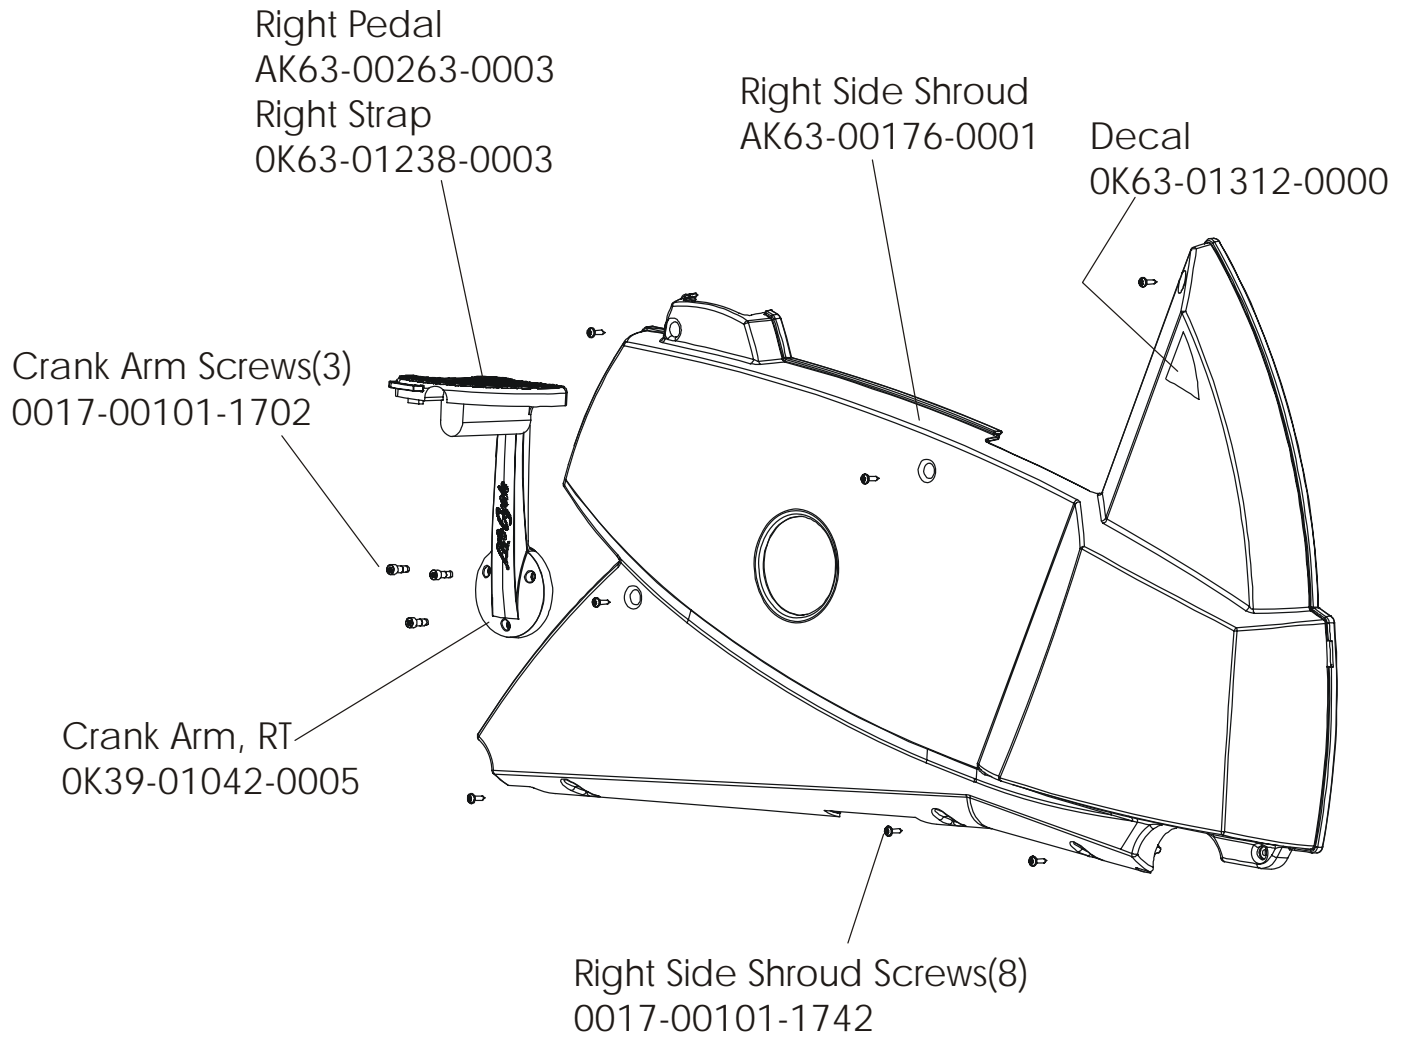



Life Cycle 95Ci
PCB Mounting Bracket AK63-00049-0000

     
95C-0XXX-01
S/N LCI100001

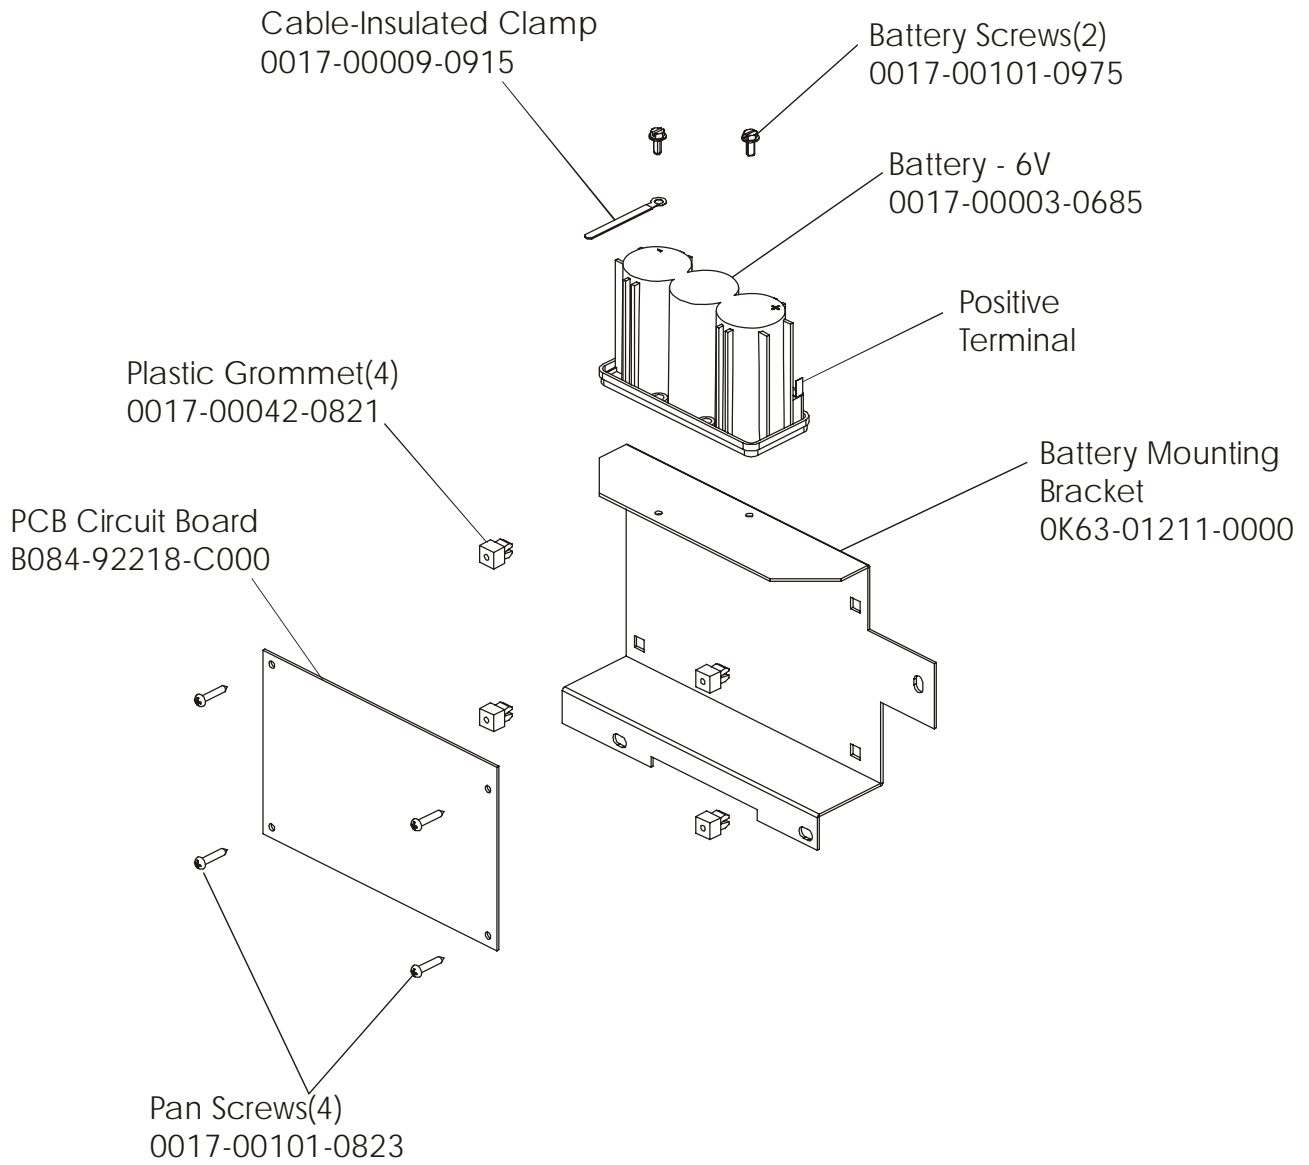

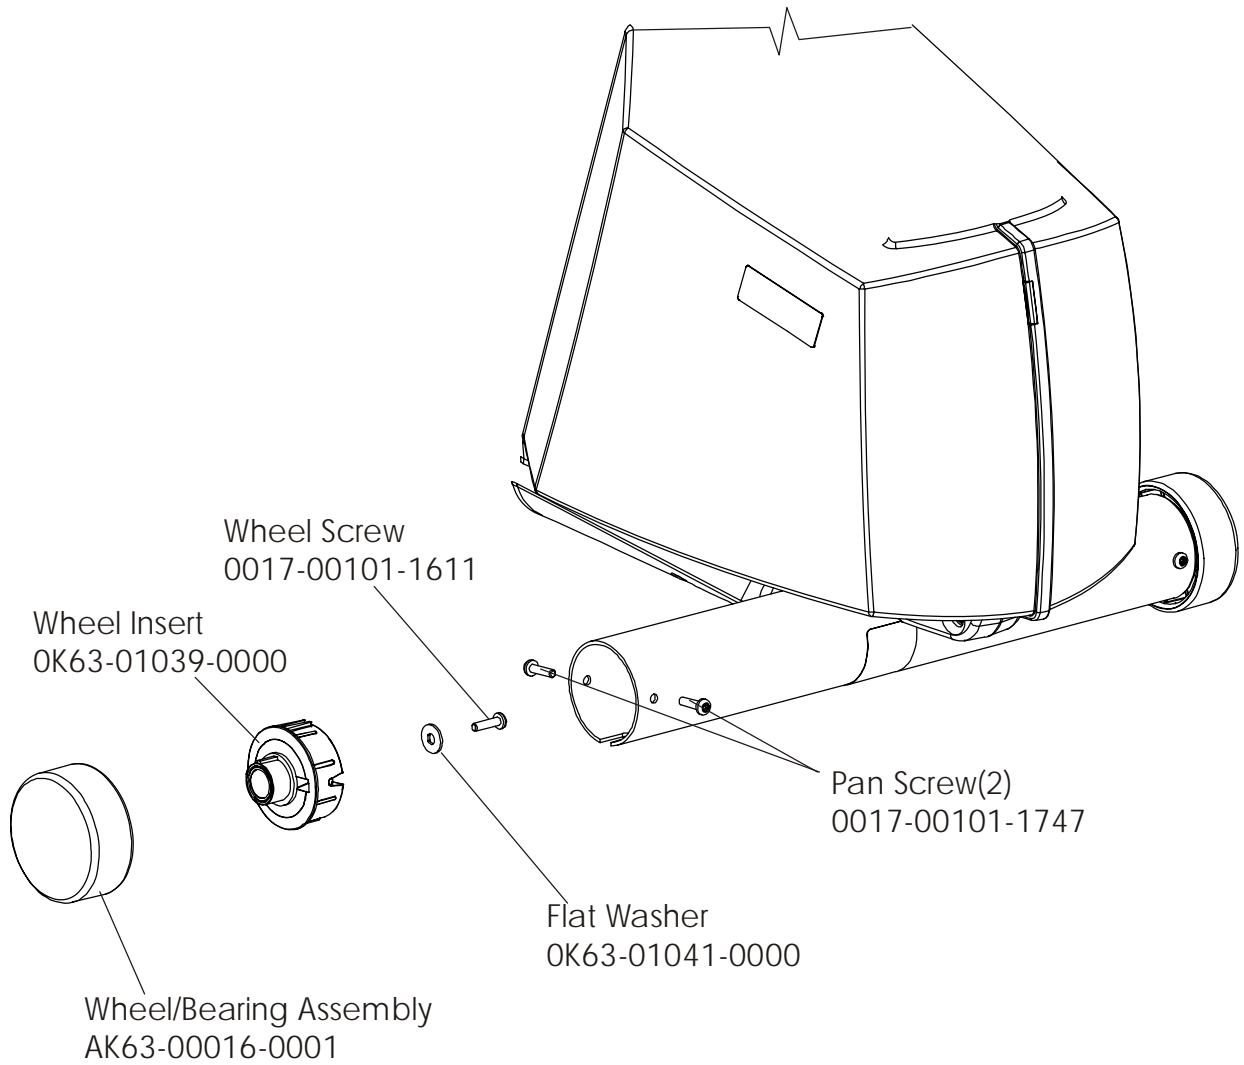


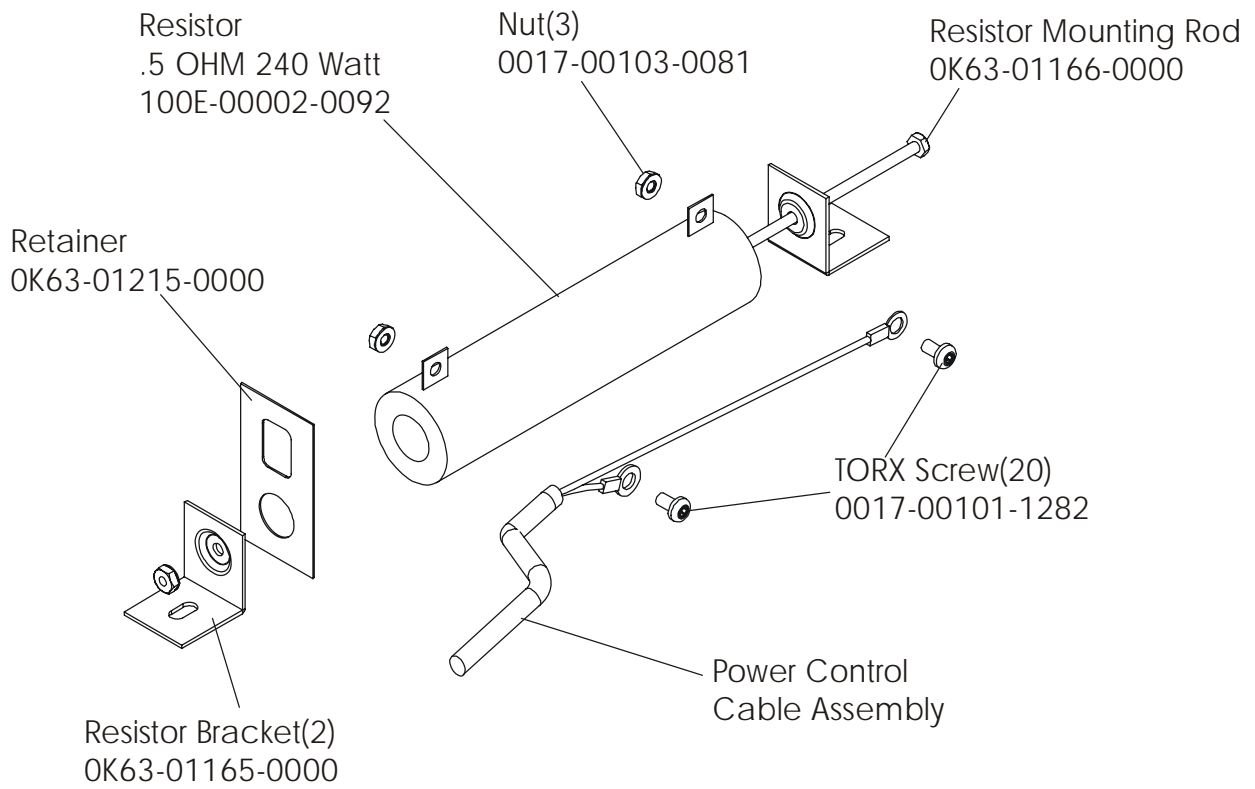

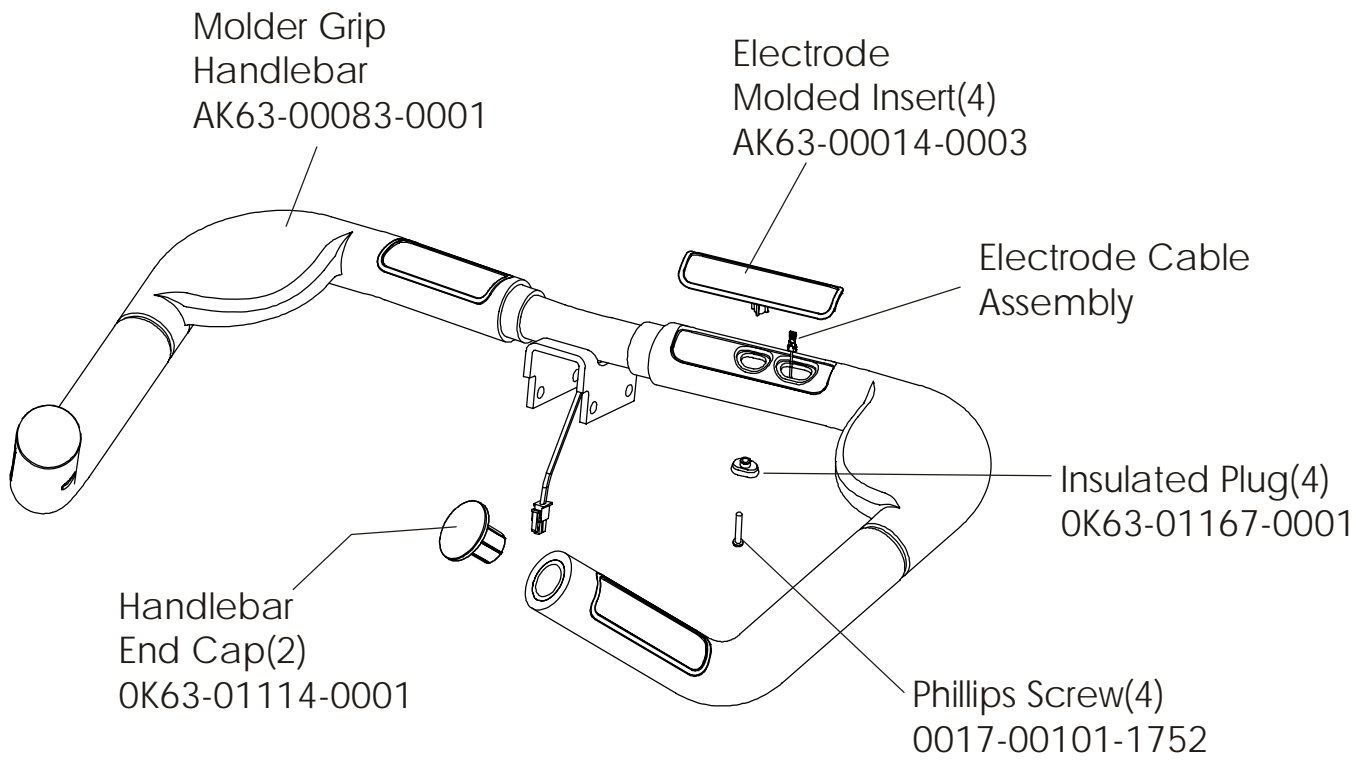

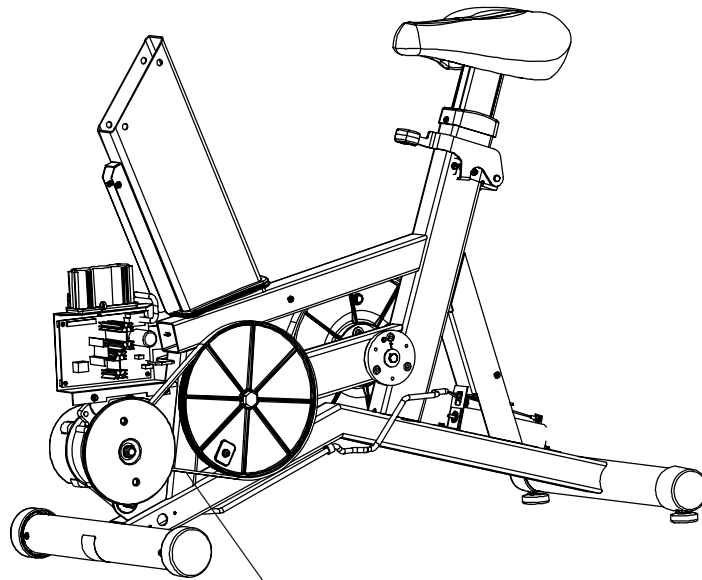


Alternator Belt
OK63-01065-0000

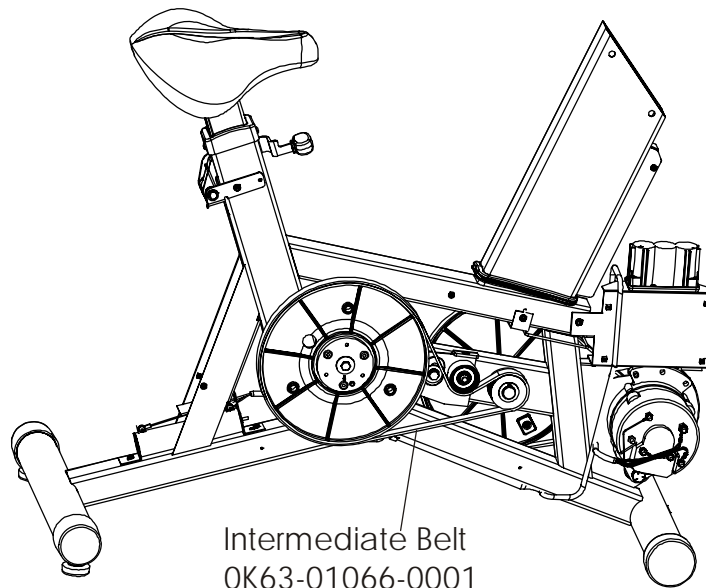 

Intermediate Belt
OK63-01066-0001

 CABLE ASSEMBLY
POWER CONTROL TO ALTERNATOR
AK63-00029-0000

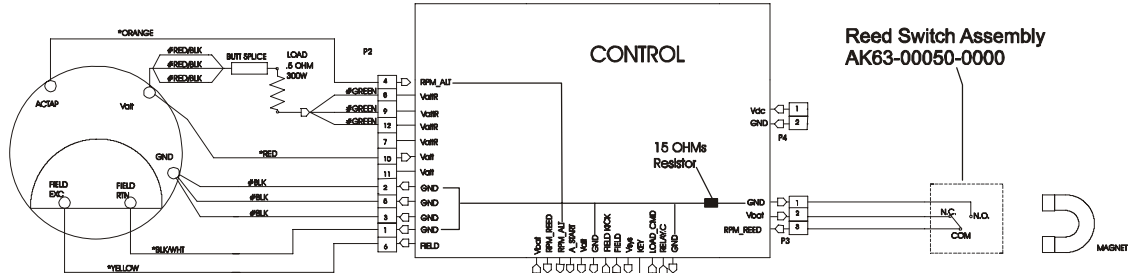

CONSOLE TO ACB CABLE
AK63-00037-0002

LOWER CONSOLE
CABLE
AK63-00038-0000

 
CABLE ASSEMBLY
AK63-00028-0001

LIFE PULSE EXTENSION
AK63-00069-0000

P9

UPPER CONSOLE

LOWER KEYPAD
UPPER KEYPAD

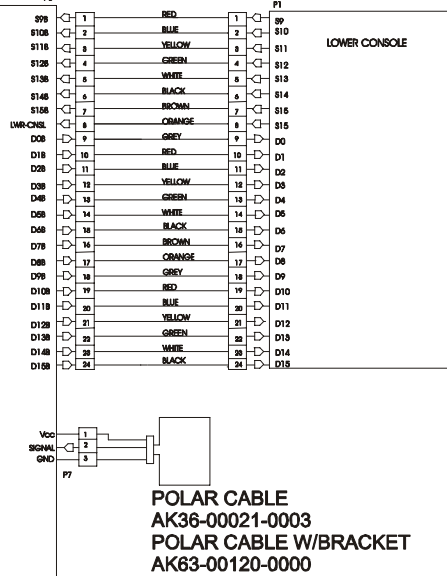

POLAR CABLE
AK36-00021-0003
POLAR CABLE W/BACKET
AK63-00120-0000

UNLABELED PARTS

DESCRIPTION	PART NO.
BRUSH-HOLDER ASSY: MANDO ALT.A	0017-00009-0895
KIT: ACCESSORY-TRAY; STEALTH BM	GK63-00002-0062
SIGN: FACILITY SAFETY; ENG B	M051-00K20-A409
CARD: WARRANTY; COMMERCIAL +	M051-00K20-C408
INSTR: UNPACKING +	M051-00K63-A080
INSTR; ASSY; ENG +	M051-00K63-A081
ENDCAP: REAR-STABALIZER; STEALTH S/C-C	OK63-01219-0001
REED-SW MTGBRKT ASSY: MFG. B	AK63-00050-0000
CRANK-PULLEY ASSY; MFG. D	AK63-00051-0000
ALTERNATOR-PULLEY ASSY: MFG. B	AK63-00093-0000
HANDLEBAR-MOLD ASSY; PURCH. E	AK63-00156-0001
SEAT-ASSY: PURCH;DLXGRY S/C-D	AK63-00229-0003
SEATPOST-EXTR ASSY: MFG. S/C-E	AK63-00232-0002
KIT: SERV; MFG; ACCESSORY; POWER; 120/60 DOM BM	GK63-00002-0005