


LifeFitness

ARCTIC SILVER 95Ci Upright Bike

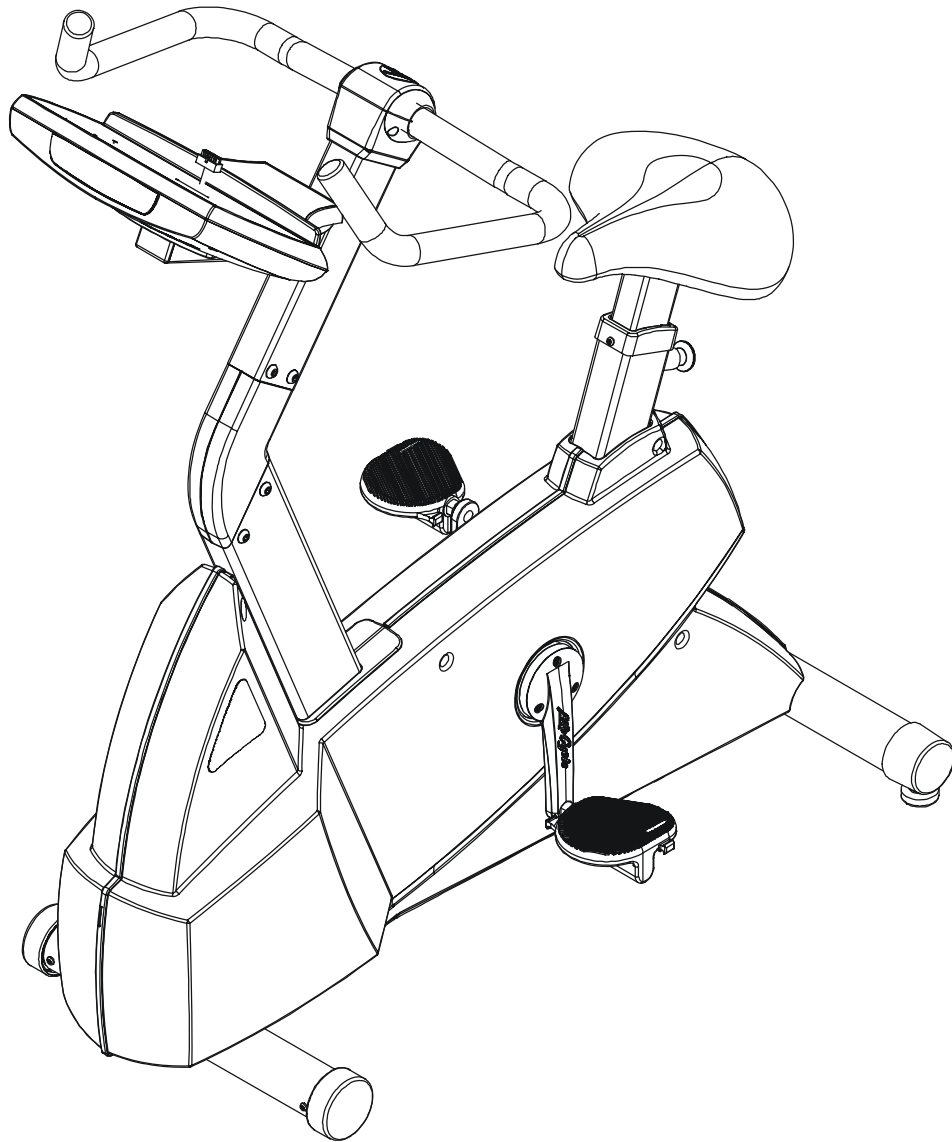

Customer Support Services
PARTS MANUAL rev 29 Jan 2010

ARCTIC SILVER 95Ci
REFERENCES


95C-0XXX-02
S/N CCP100000 and UP

OPERATION MANUAL	M051-00K63-A064
HARDWARE BAG	GK63-00002-0044
NETWORK C-SAFE KIT	GK63-00002-0003
POWER OPTION KIT – 120V	GK63-00002-0005
POWER OPTION KIT – 220/50 UK	GK63-00002-0039
POWER OPTION KIT – 240V+ AUS	GK63-00002-0040
POWER OPTION KIT – 220/50	GK63-00002-0041
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K63-A009

	Page
CONSOLE COMPONENTS	4
CONSOLE MOUNTING SCREWS AND POLAR COVERS.....	5
ALTERNATOR W/PULLEY	6
CRANKSHAFT AND BEARING ASSEMBLY.....	7
INTERMEDIATE SHAFT AND BEARING ASSEMBLY.....	8
SEAT LATCH ASSEMBLY	9
SEAT POST ASSEMBLY	10
SEAT POST SHROUDS.....	11
IDLER BRACKET ASSEMBLY.....	12
CONSOLE SUPPORT ASSEMBLY.....	13
LEFT SIDE SHROUD AND CRANKARM	14
RIGHT SIDE SHROUD AND CRANKARM.....	15
PCB MOUNTING BRACKET ASSEMBLY.....	16
FRONT WHEELS.....	17
RESISTOR ASSEMBLY.....	18
HANDLEBAR ASSEMBLY.....	19
BELTS.....	20
CABLES.....	21

ARCTIC SILVER 95Ci
Console Components


95C-0XXX-02
S/N CCP100000 and UP

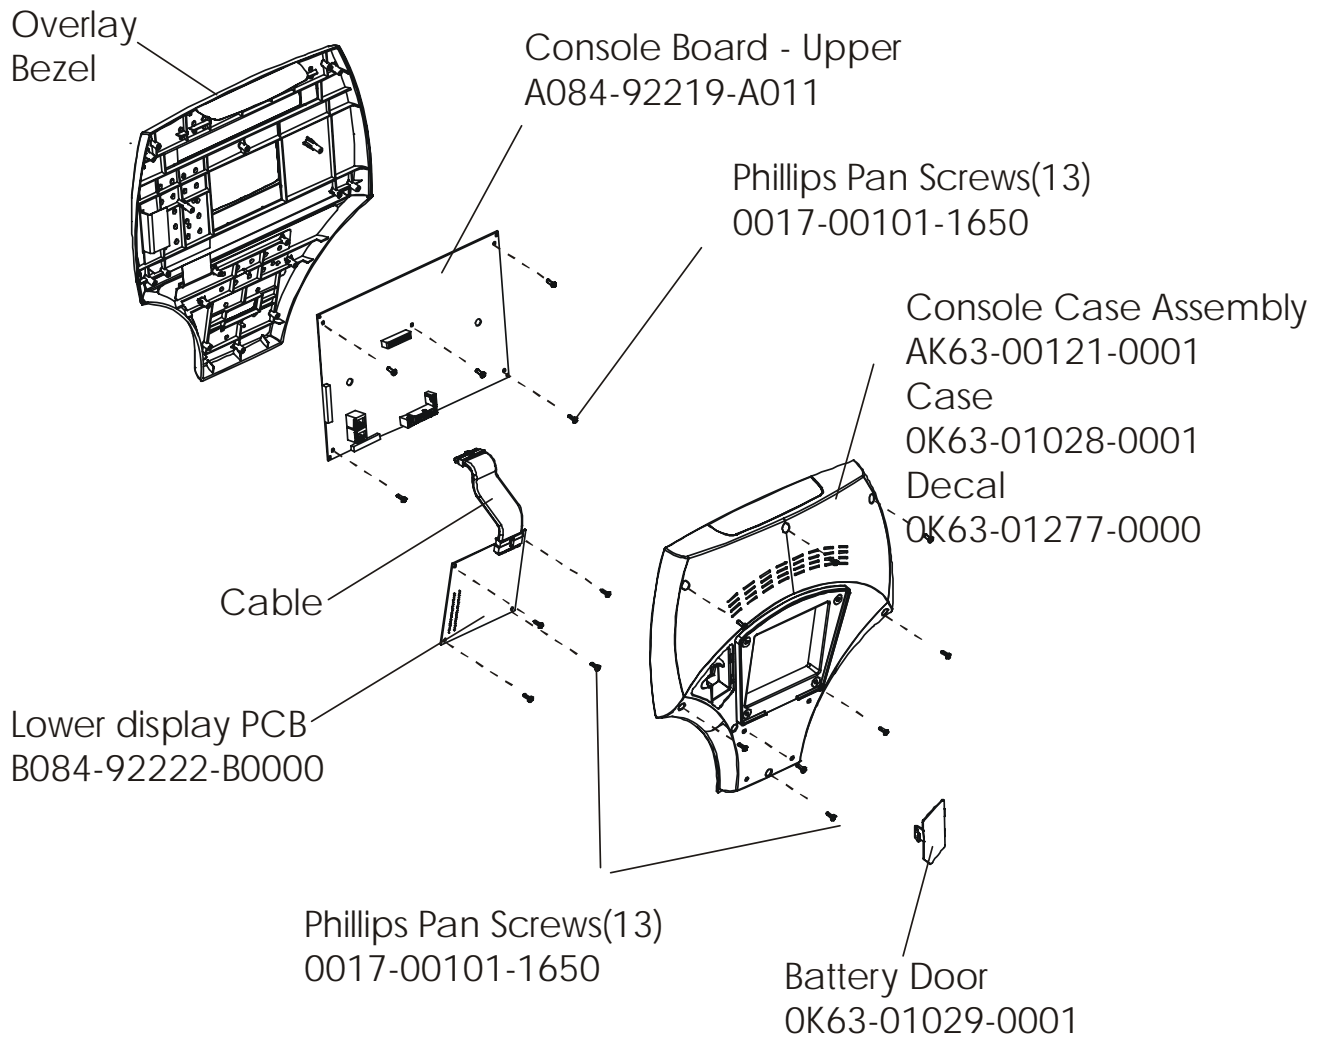

Console Assembly	Bezel/Switch W/Overlay Assy.
AK63-00160-0001 Eng Met	AK63-00165-0001 Eng Met
AK63-00160-0003 Ger Met	AK63-00165-0003 Ger Met
AK63-00160-0004 Spn Met	AK63-00165-0004 Spn Met
AK63-00160-0006 Jap Met	AK63-00165-0006 Jap Met
AK63-00160-0007 Frn Met	AK63-00165-0007 Frn Met
AK63-00160-0008 Itl Met	AK63-00165-0008 Itl Met
AK63-00160-0009 Dut Met	AK63-00165-0009 Dut Met
AK63-00160-0010 Por Met	AK63-00165-0010 Por Met


ARCTIC SILVER 95Ci
Console Screws & Polar Covers

95C-0XXX-02
S/N CCP100000 and UP

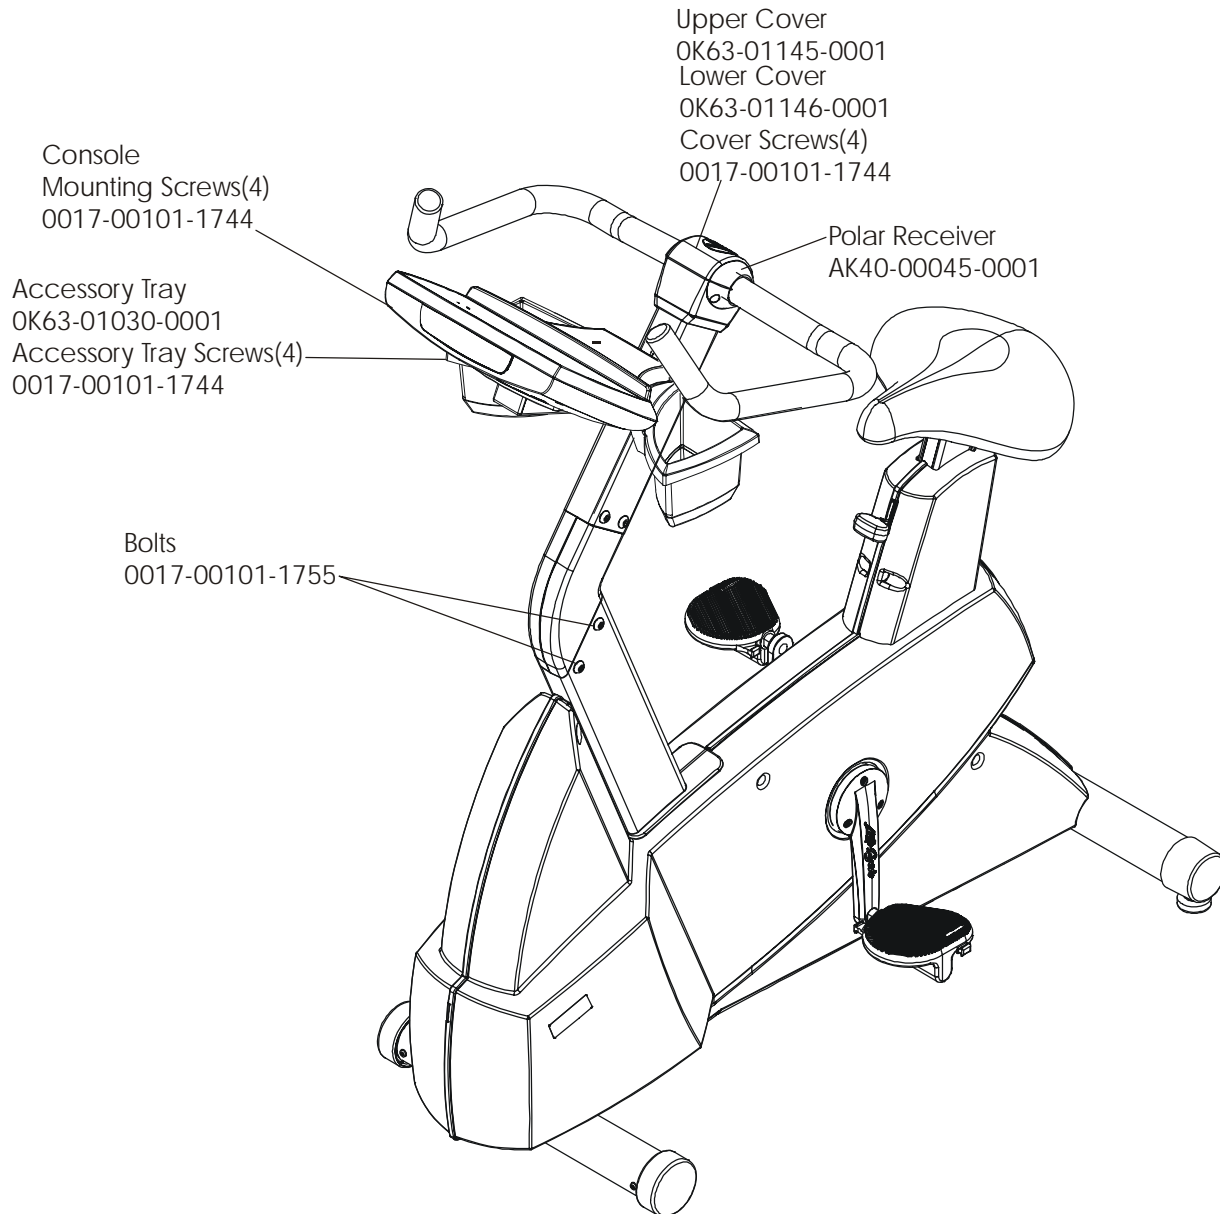


ARCTIC SILVER 95Ci
Alternator w/Pulley-AK63-00093-0000

95C-0XXX-02
S/N CCP100000 and UP

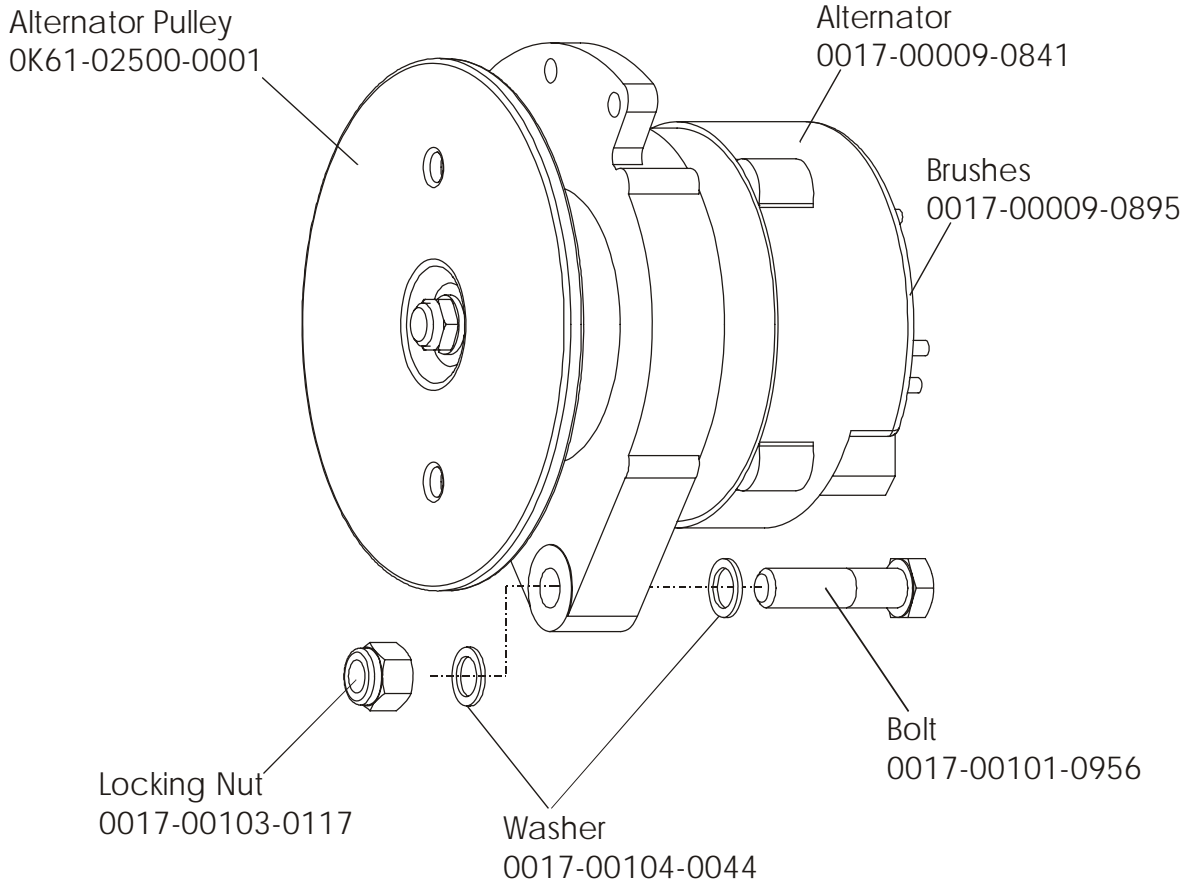

ARCTIC SILVER 95Ci
Crankshaft and Bearing Assembly

95C-0XXX-02
S/N CCP100000 and UP

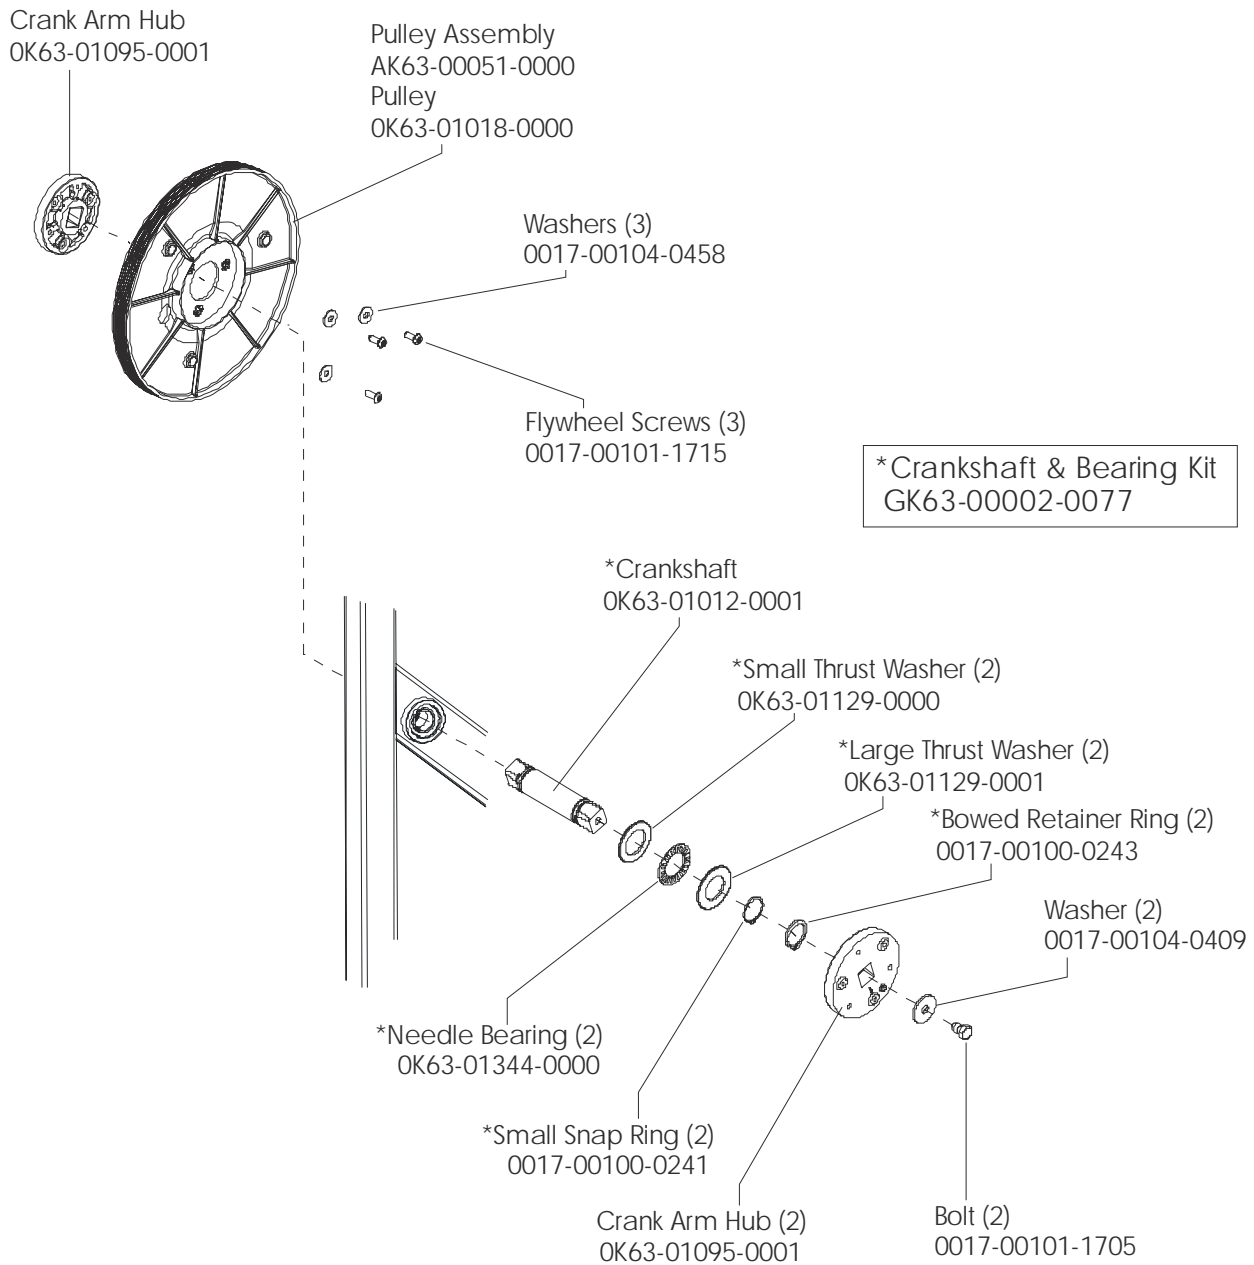

ARCTIC SILVER 95Ci


95C-0XXX-02

Intermediate Shaft and Bearing Assembly

S/N CCP100000 and UP

Clutch Assembly
AK63-00026-0000
(not included in kit)

Magnet
118E-00001-0124
(not included in kit)

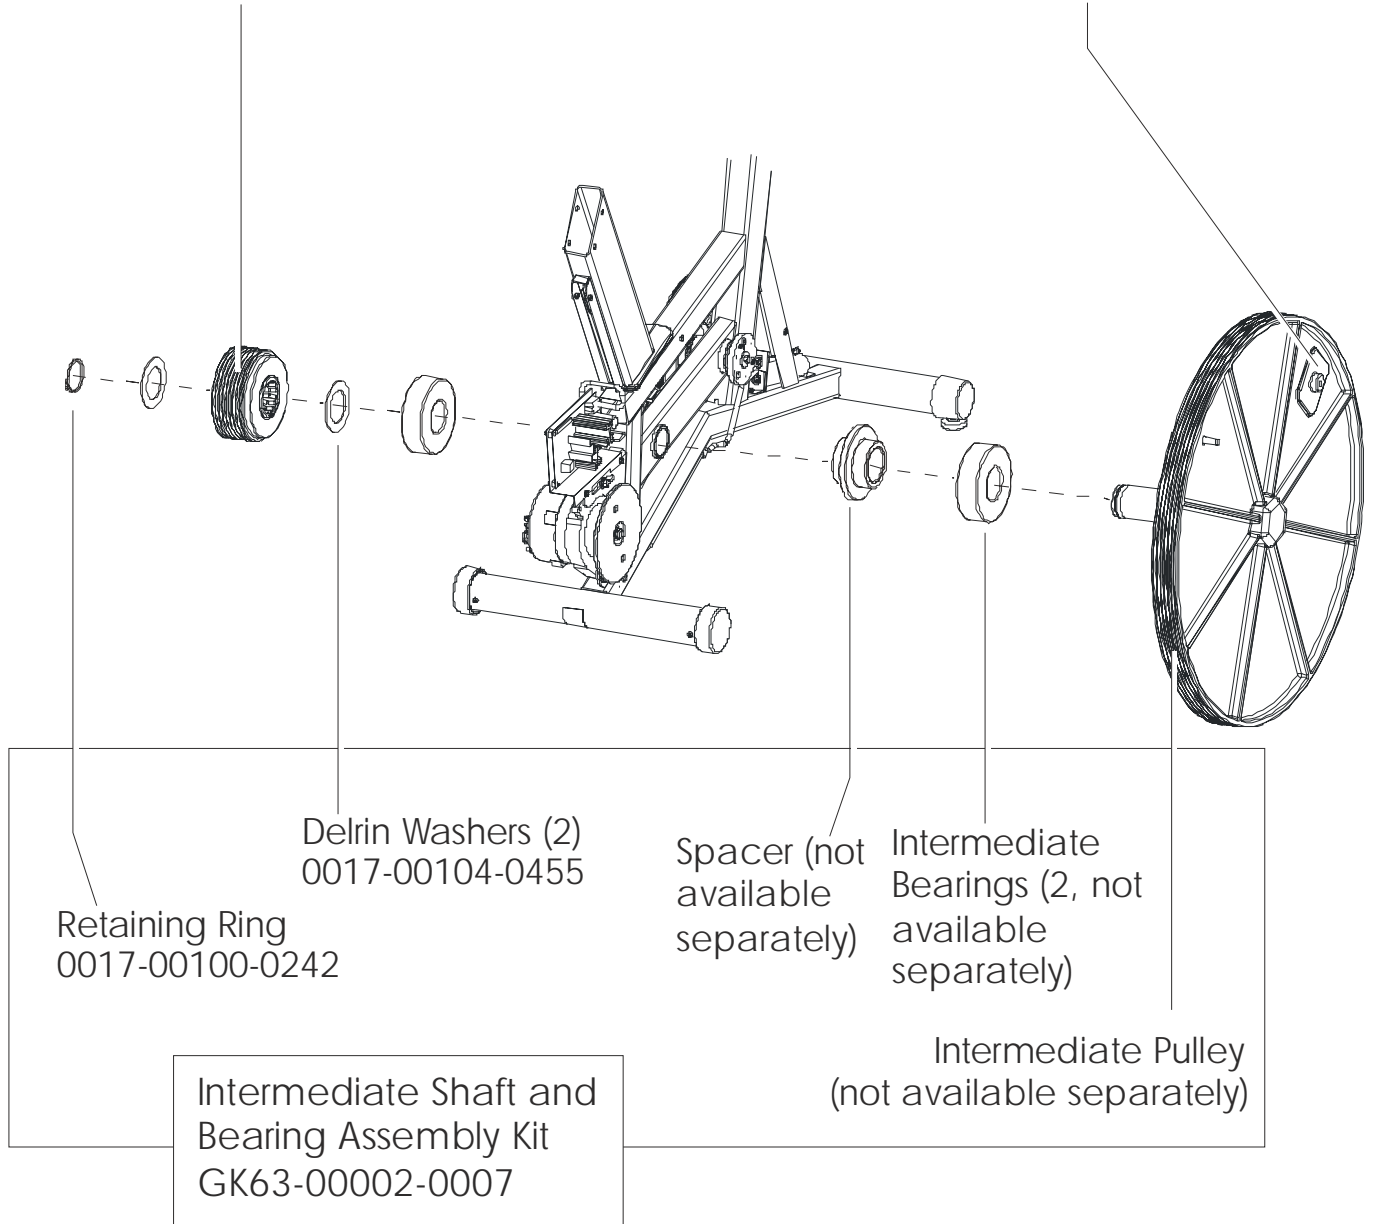


ARCTIC SILVER 95Ci

Seat Latch Assembly - AK63-00043-0001

95C-0XXX-02

S/N CCP100000 and UP

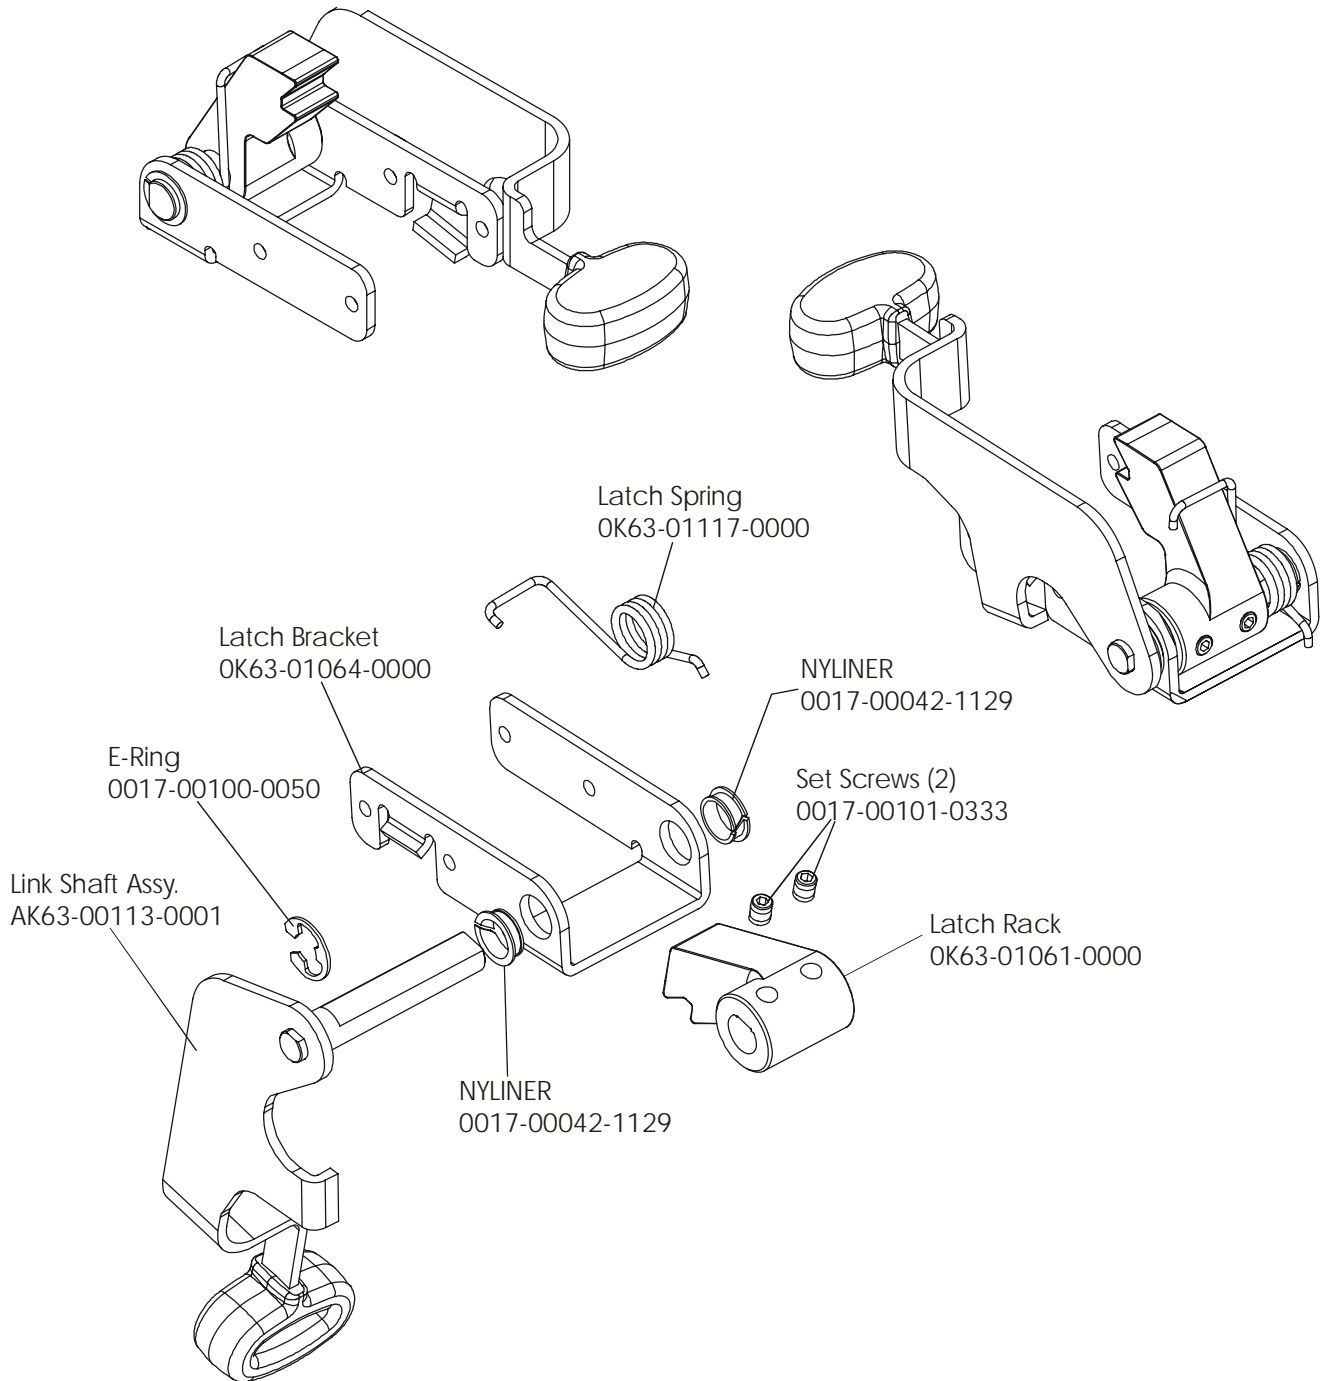


ARCTIC SILVER 95Ci

Seat Post Assembly – AK63-00232-0002



95C-0XXX-02

S/N CCP100000 and UP

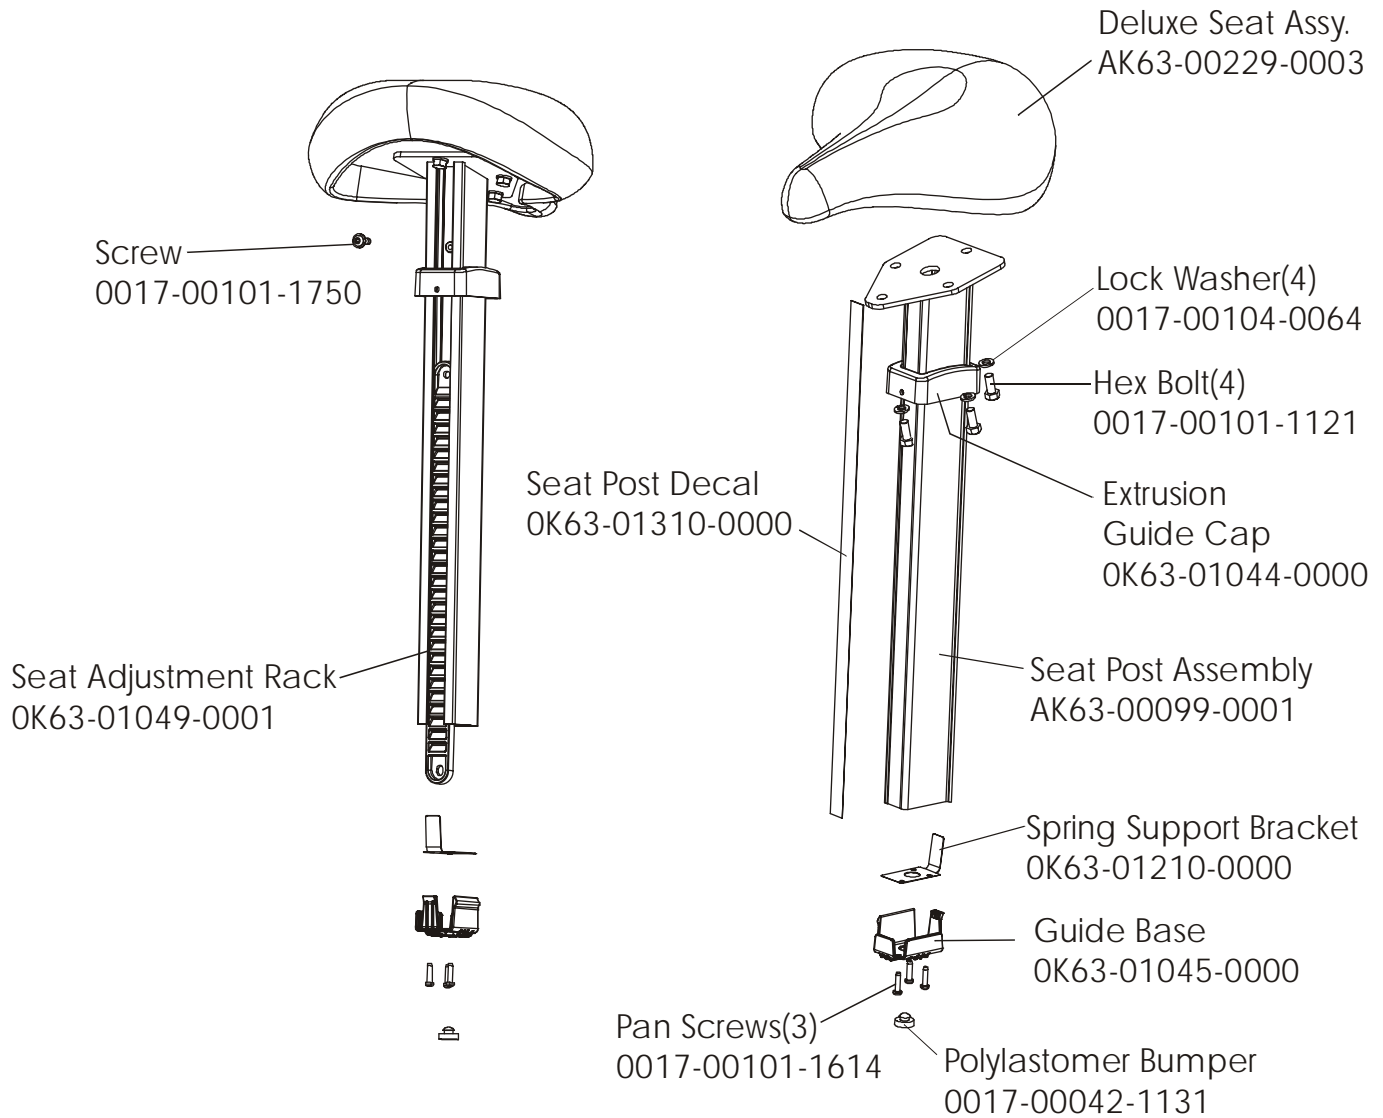

ARCTIC SILVER 95Ci
Seat Post Shrouds

95C-0XXX-02
S/N CCP100000 and UP

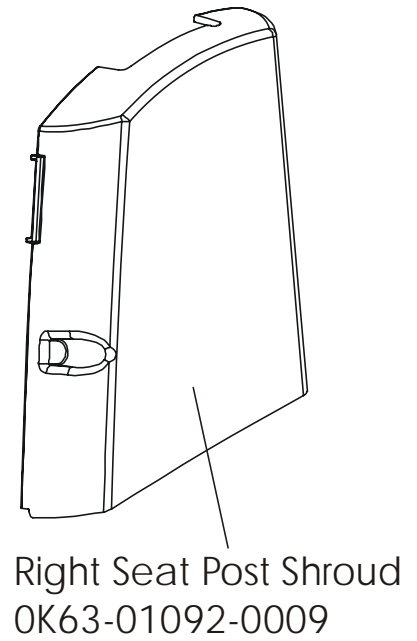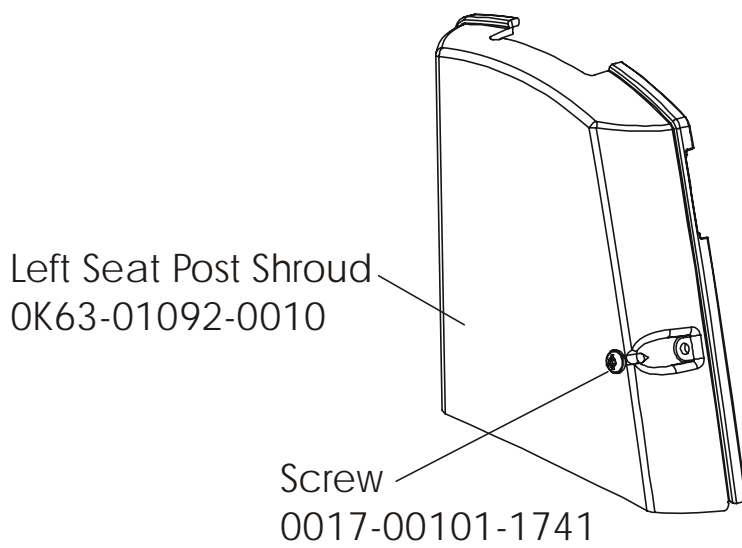


ARCTIC SILVER 95Ci

95C-0XXX-02


Idler Bracket Assembly - AK63-00021-0000

S/N CCP100000 and UP

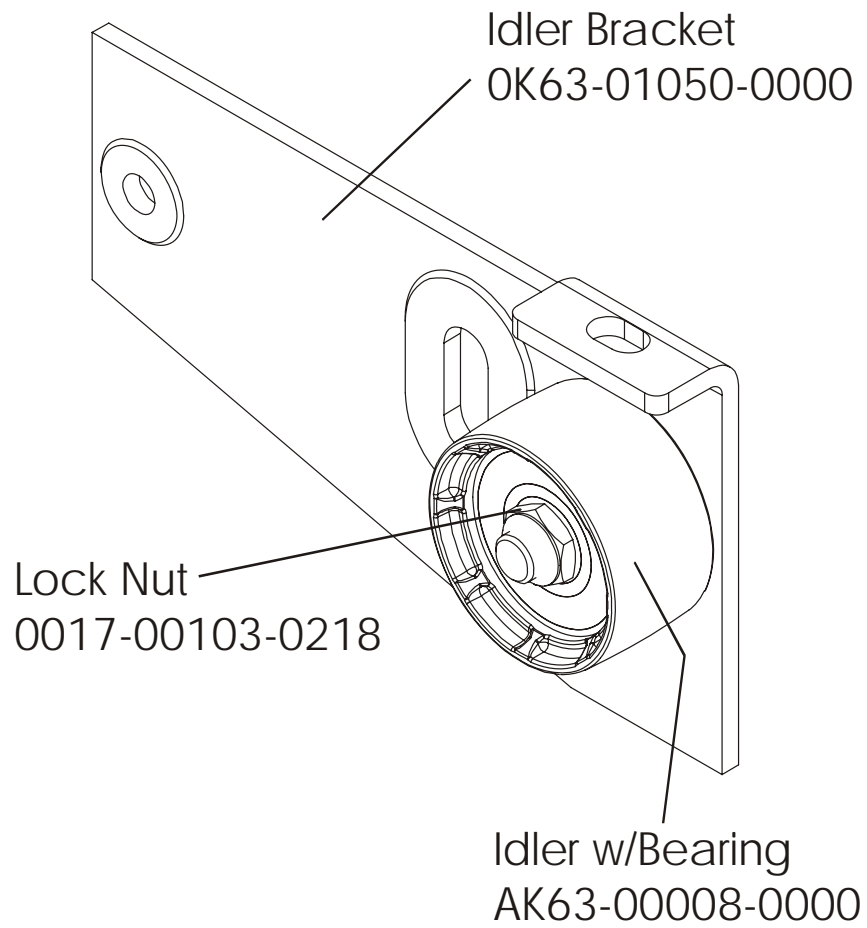


ARCTIC SILVER 95Ci
Console Support Assembly

95C-0XXX-02
S/N CCP100000 and UP

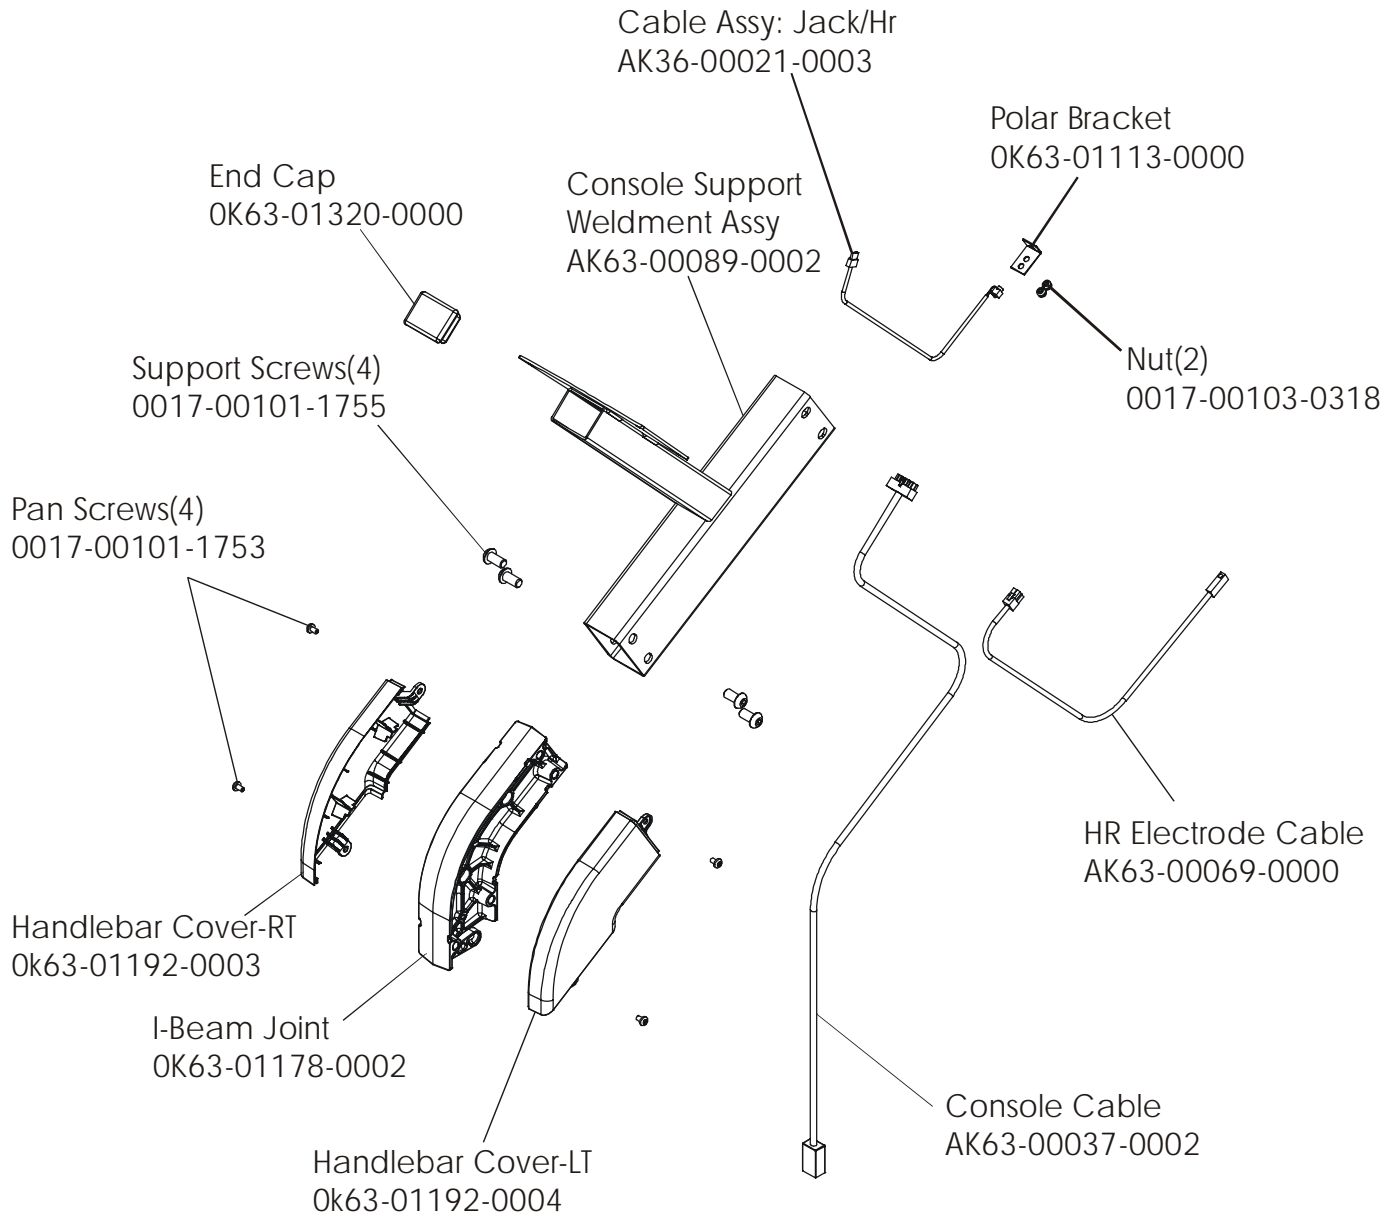

ARCTIC SILVER 95Ci
Left Side Shroud and Crankarm

95C-0XXX-02
S/N CCP100000 and UP

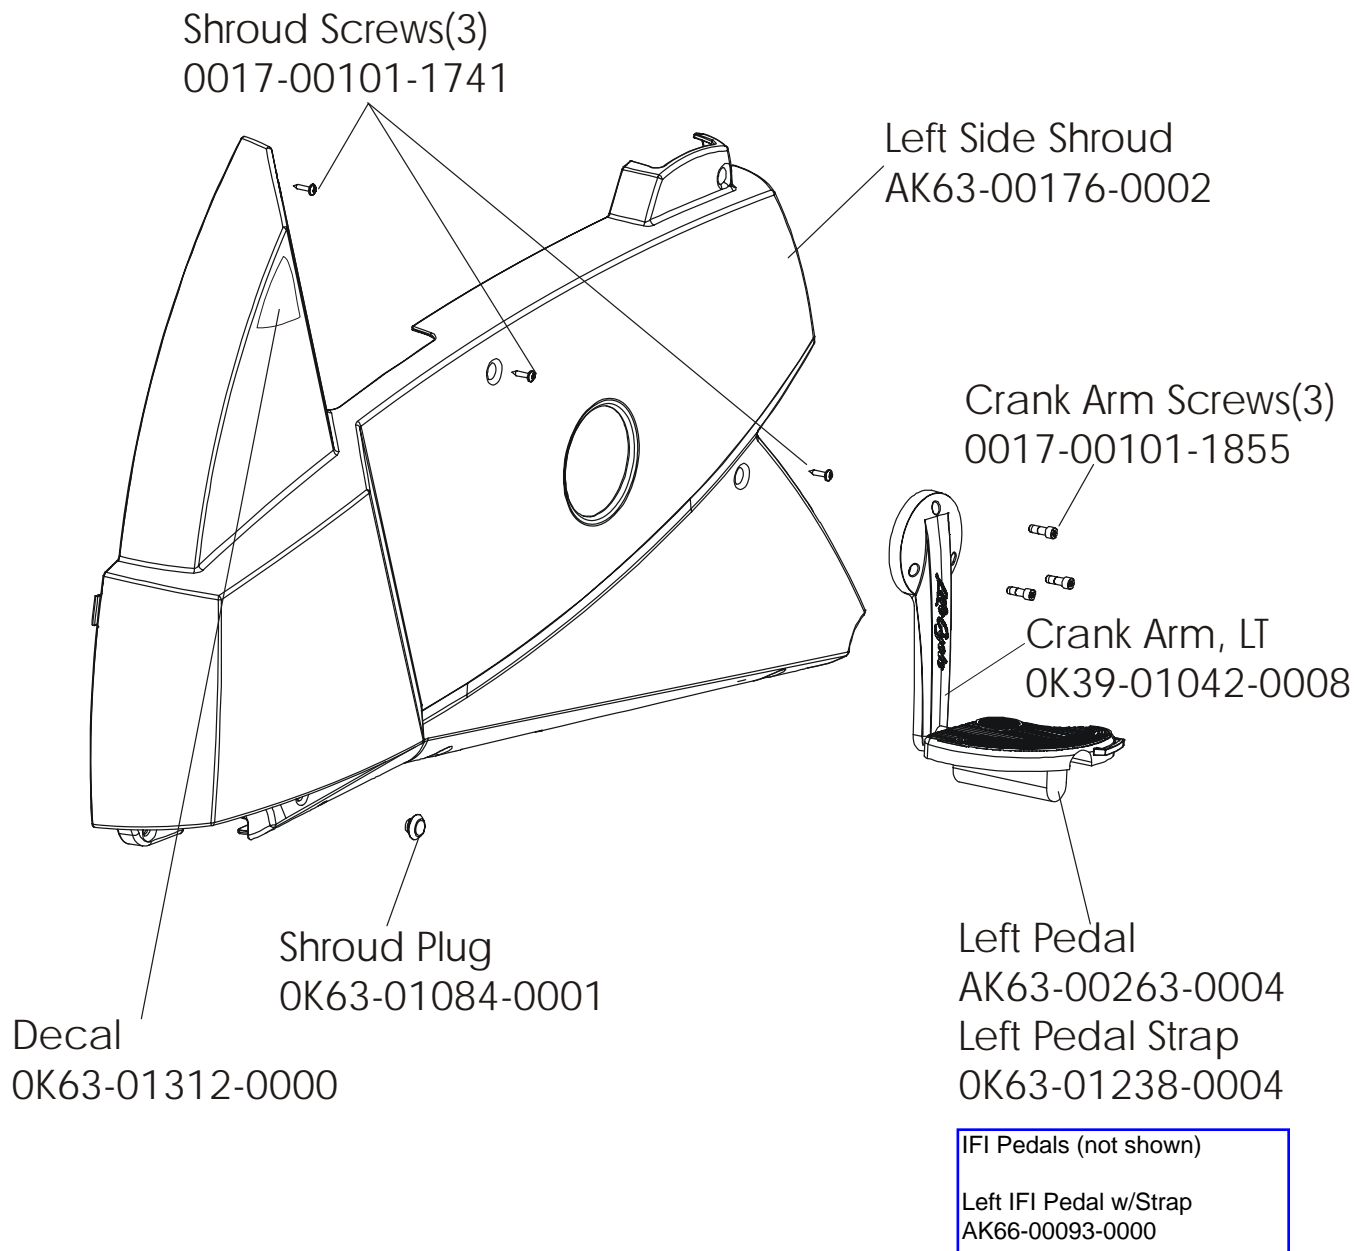


ARCTIC SILVER 95Ci

Right Side Shroud and Crankarm

95C-0XXX-02


S/N CCP100000 and UP

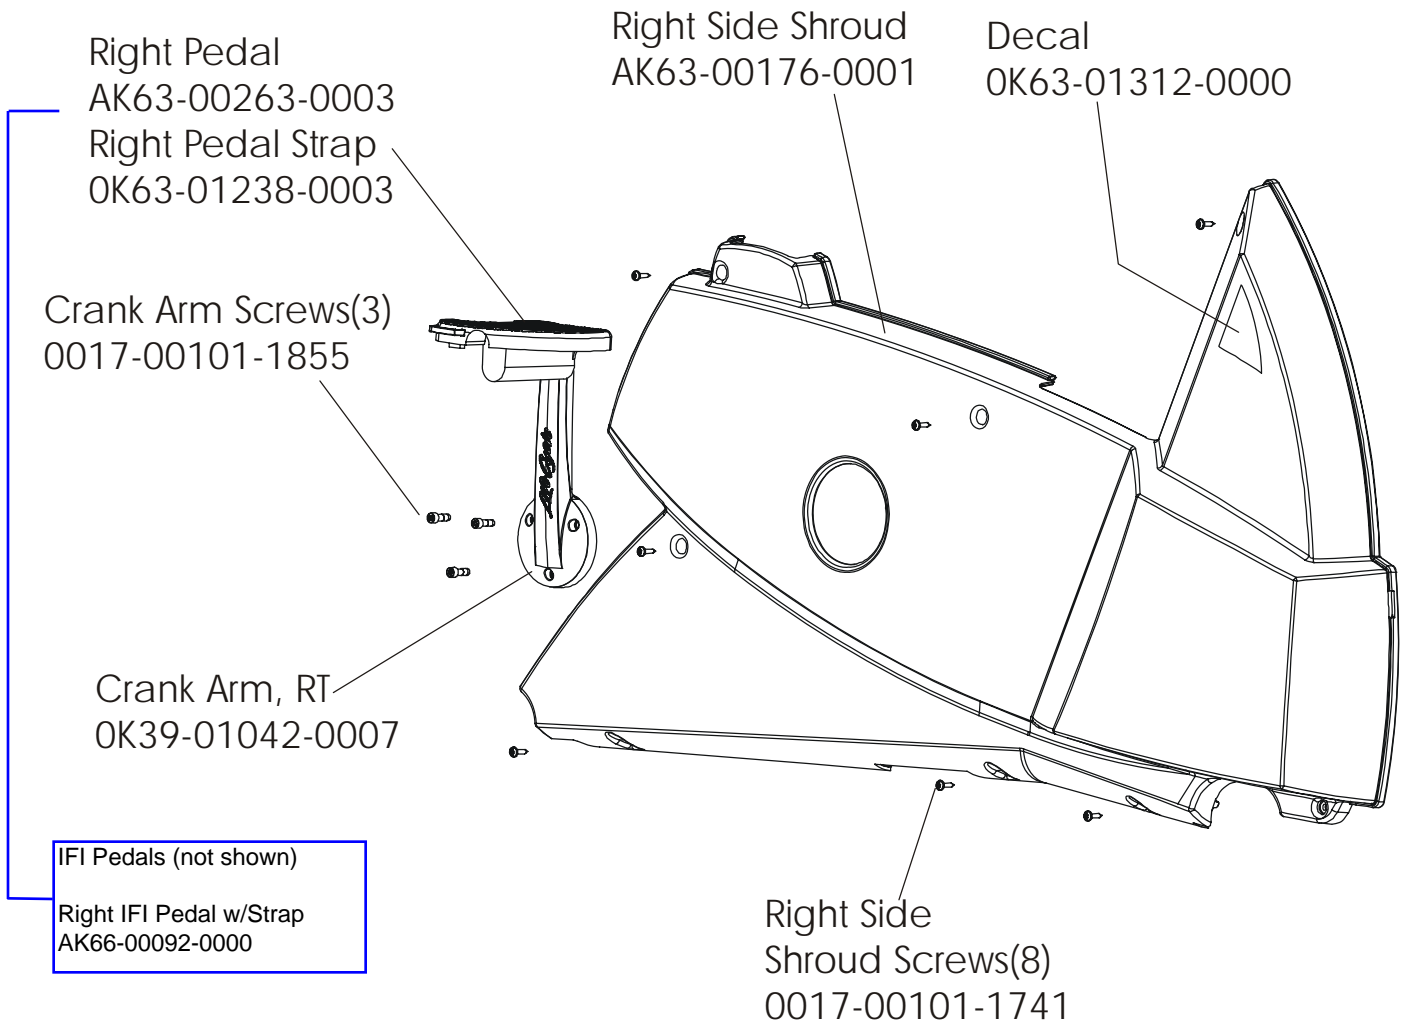


ARCTIC SILVER 95Ci
PCB Mounting Bracket Assembly

95C-0XXX-02
S/N CCP100000 and UP


Assembly Number – AK63-00049-0000

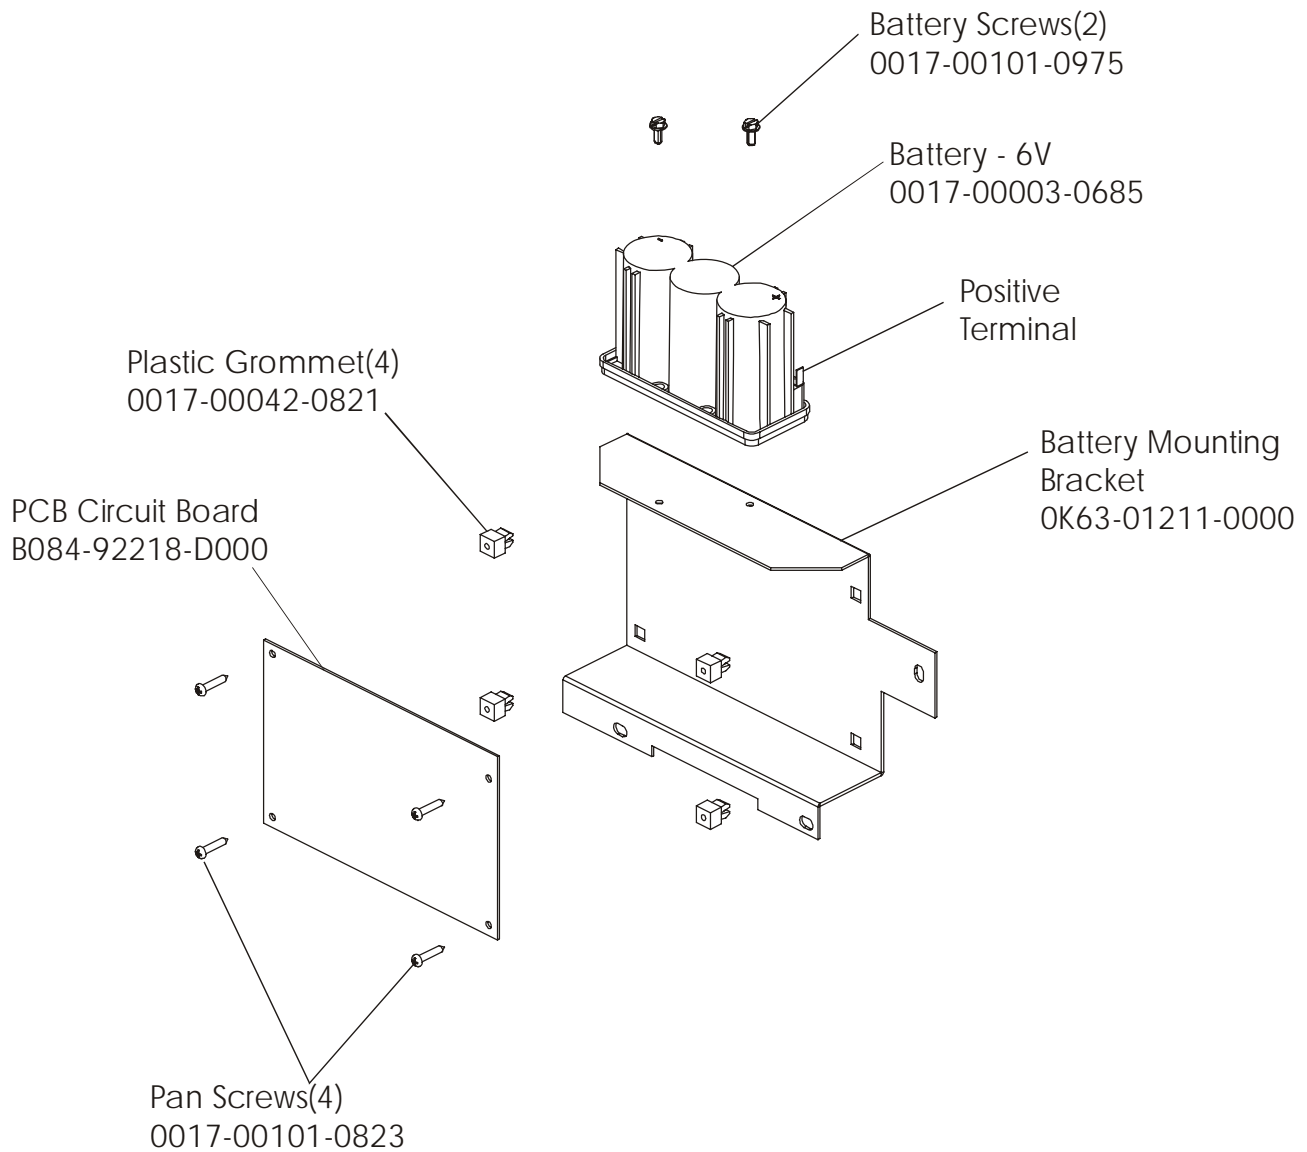

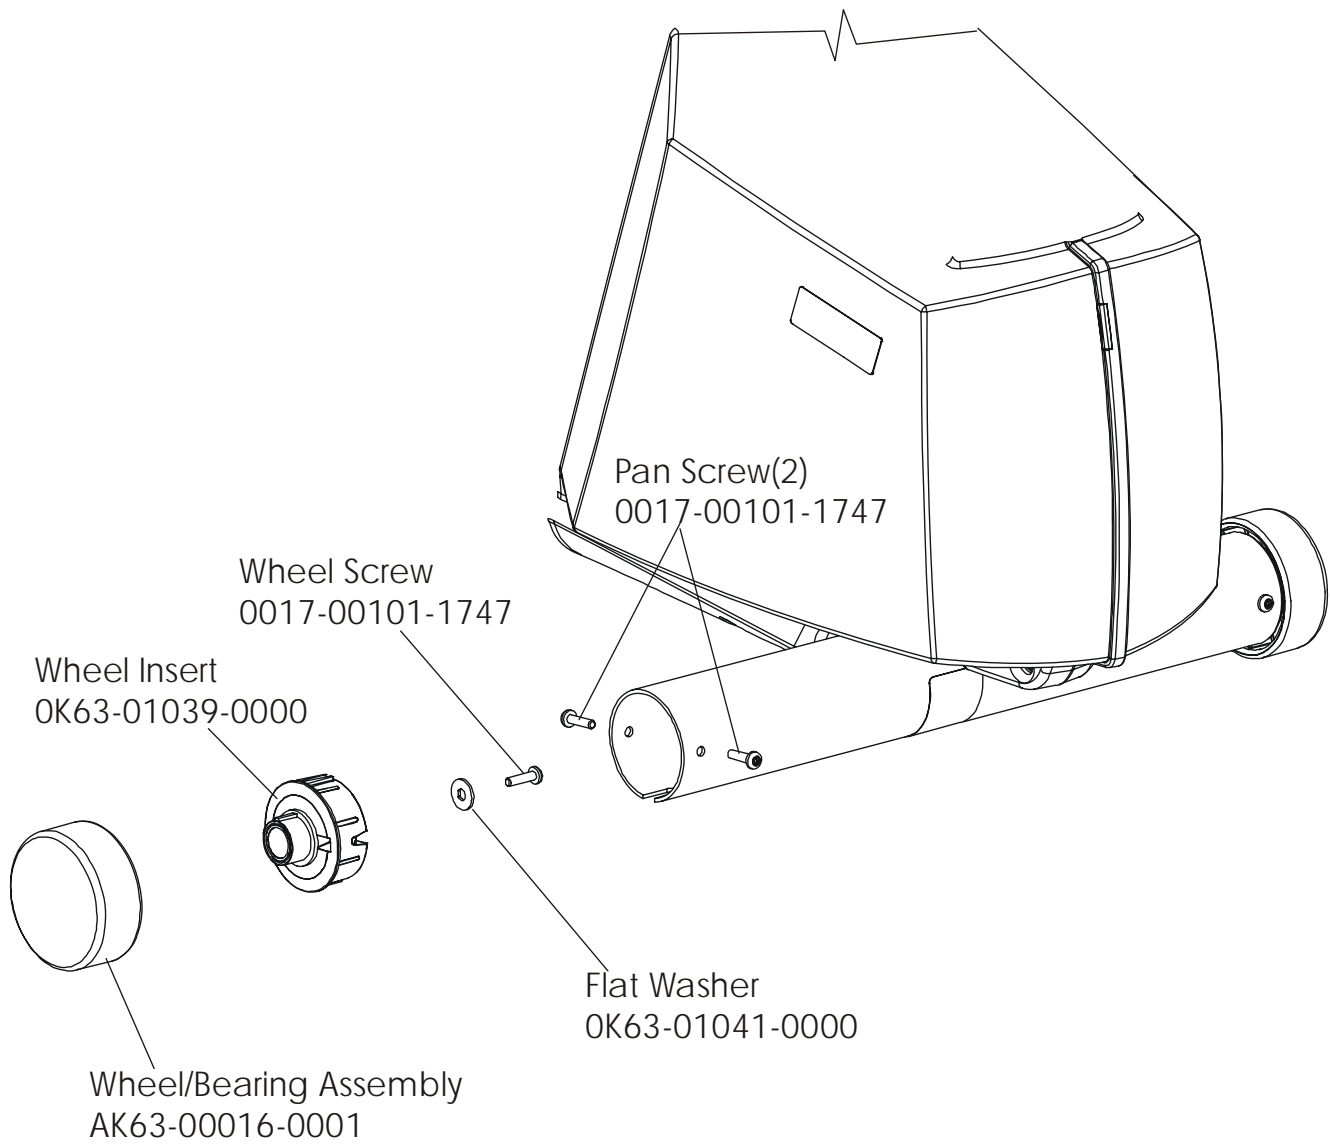

ARCTIC SILVER 95Ci
Resistor Assembly- AK63-00047-0001

95C-0XXX-02
S/N CCP100000 and UP

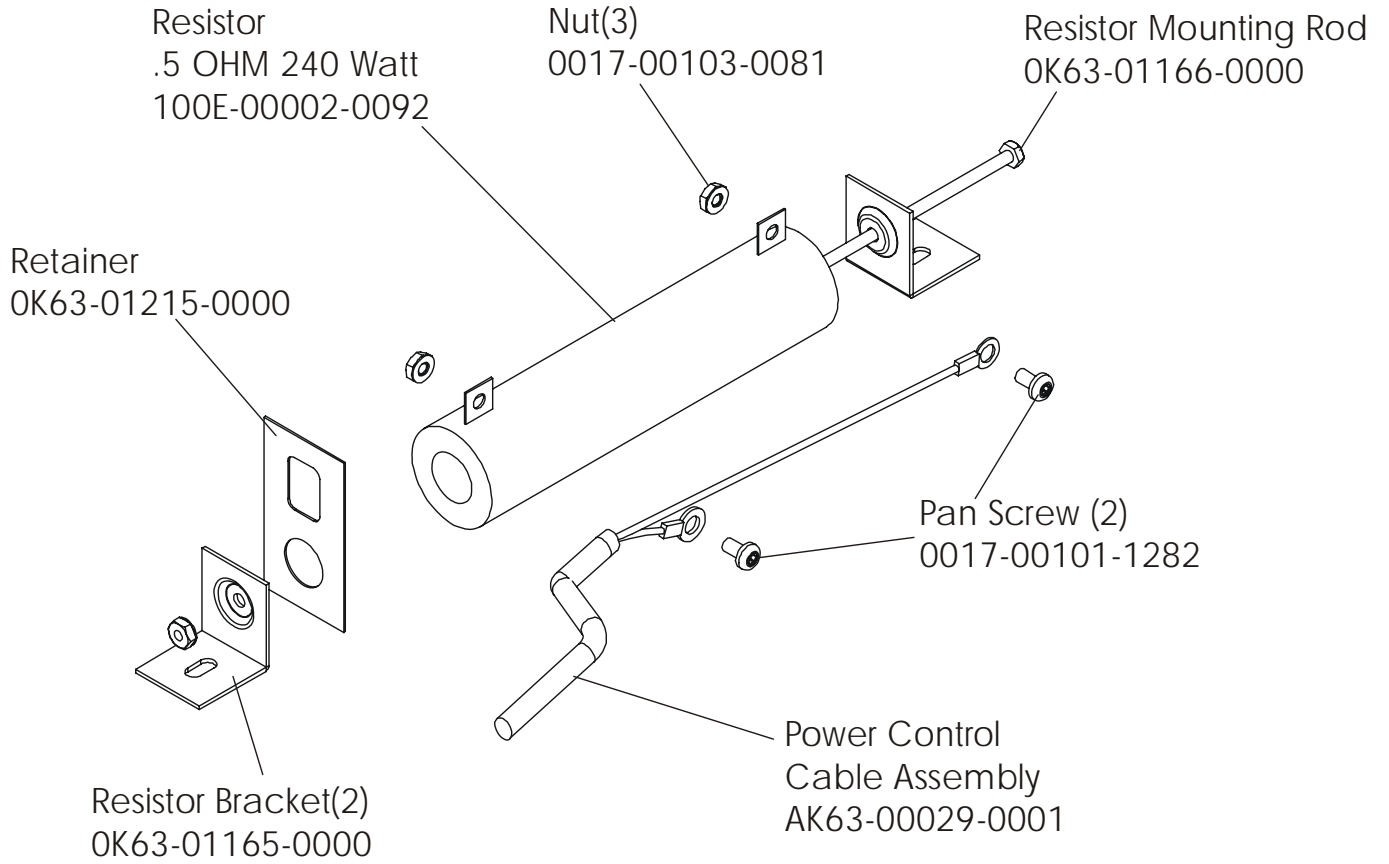



ARCTIC SILVER 95Ci

Handlebar Assembly - AK63-00091-0001


95C-0XXX-02

S/N CCP100000 and UP

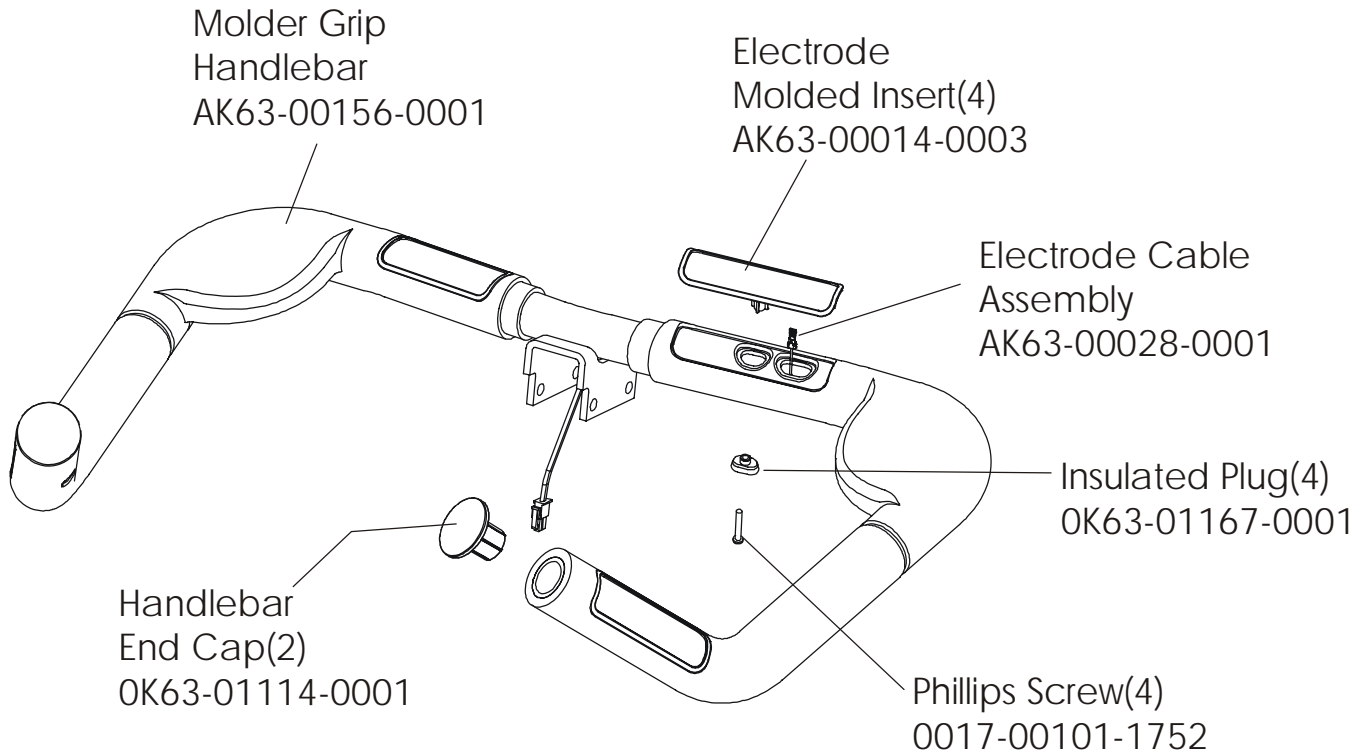

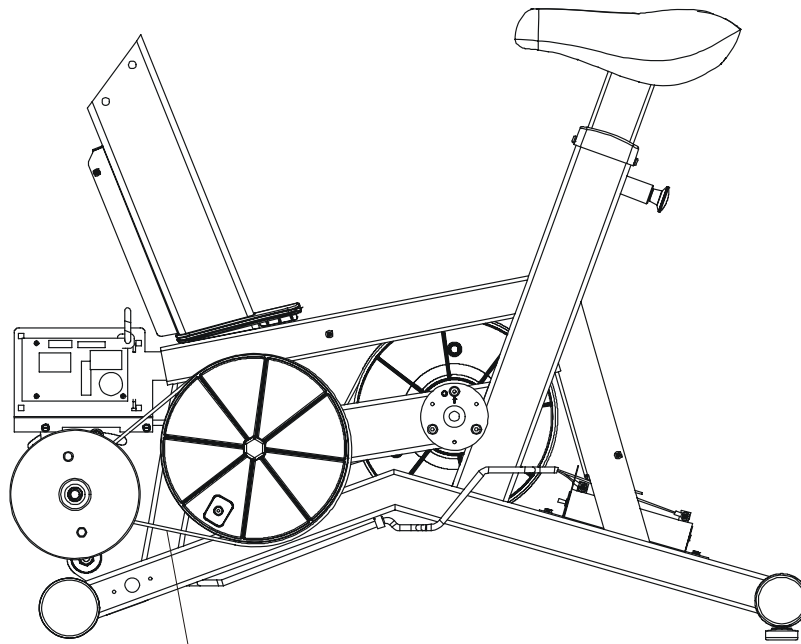


Alternator Belt
OK63-01065-0000

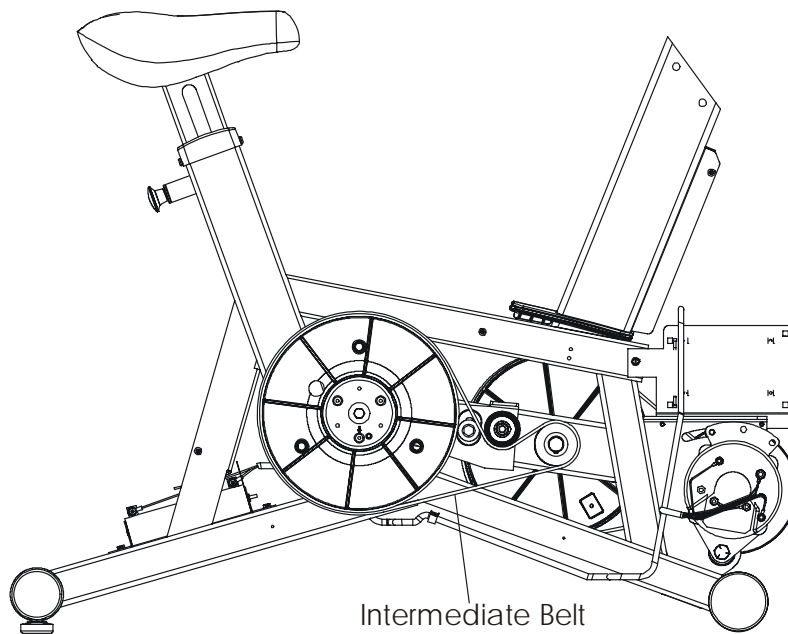

Intermediate Belt
OK63-01066-0001

**CABLE ASSEMBLY
POWER CONTROL TO ALTERNATOR
AK63-00029-0001**

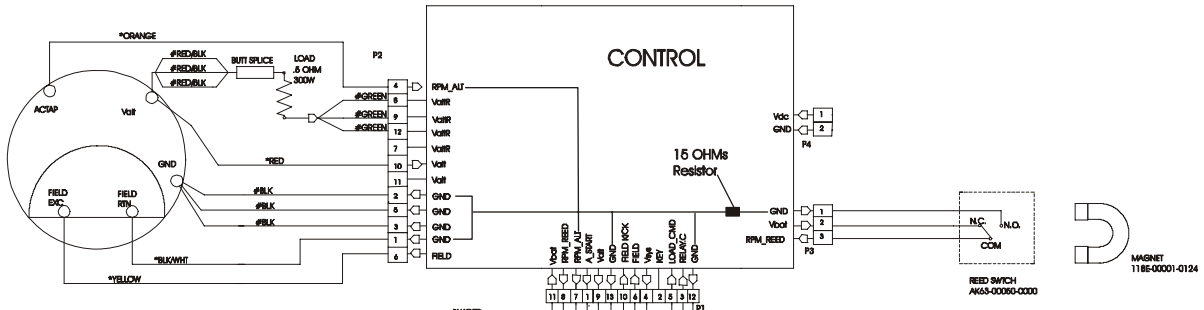


**CONSOLE TO ACB CABLE
AK63-00037-0002**

**LOWER CONSOLE
CABLE
AK63-00038-0000**

**CABLE ASSEMBLY
AK63-00028-0001**

**LIFE PULSE EXTENSION
AK63-00069-0000**

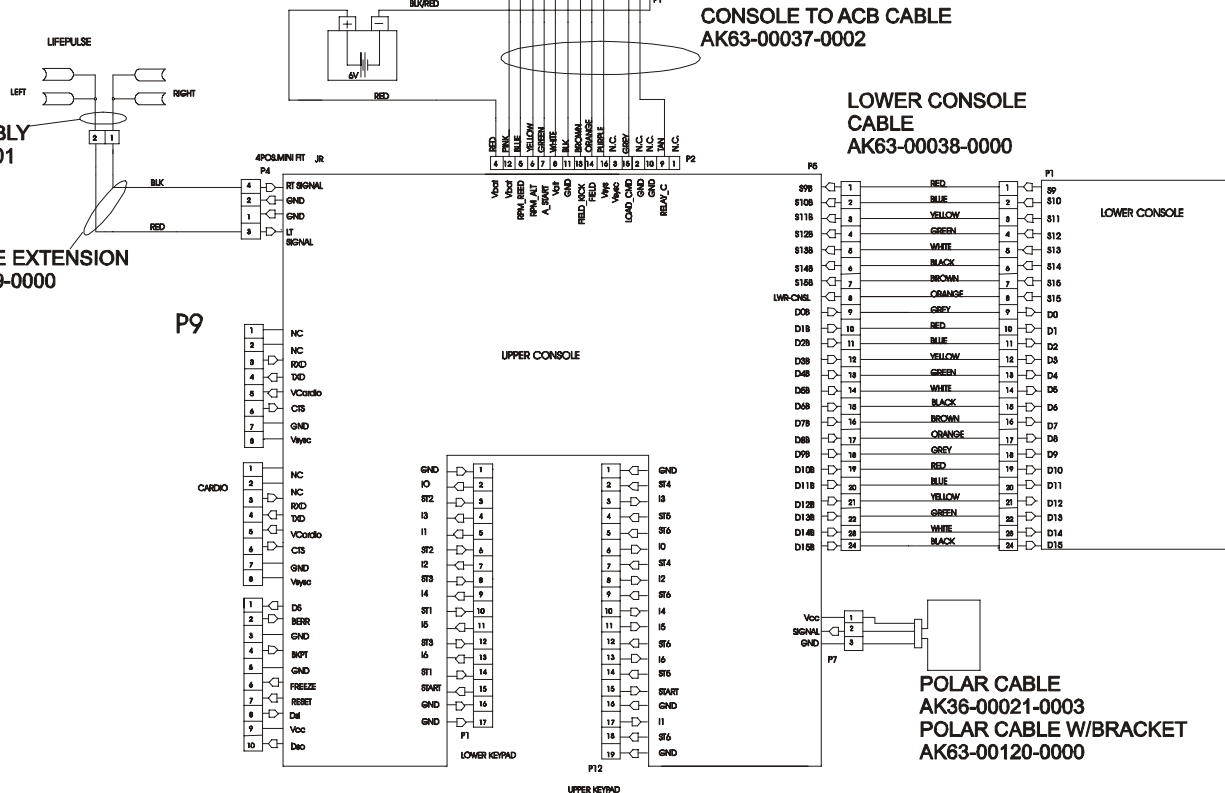

**POLAR CABLE
AK36-00021-0003
POLAR CABLE W/BACKET
AK63-00120-0000**